


RR-939B

REMOTE CONTROL
TÉLÉCOMMANDE
FERNBEDIENUNG
MANDO A DISTANCIA
COMANDO A DISTANZA
AFSTANDBEDIENING
FJERNBETJENING

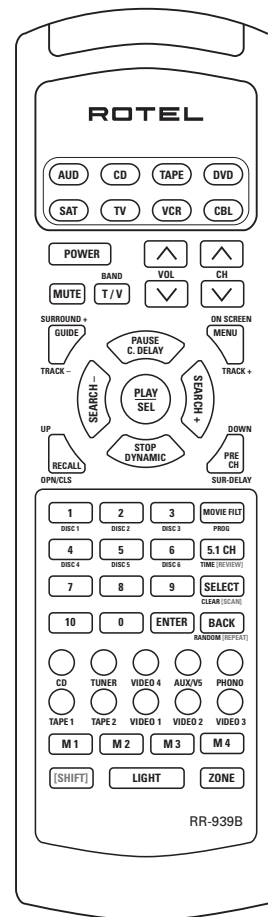

Codes and Commands
Codes de Commande
Gerätetasten und Codenummern
Códigos y Ordenes
Comandi di controllo
Code Lijst en Functie Commandos
Kodeliste og Kontroll Kommandoer

•••••
 3-Digit Code List
 Le Codes de Trois Chiffres
 Lista de Códigos Numéricos
 Liste der Dreizifferncodes
 Elenco codici a tre cifre
 De 3-cijferige Code Lijst
 3-sifret kodeliste

AUDIO

Rotel RSP966	001 002	McIntosh	026
Rotel RSP975	001 002	Mission	020 023
Rotel RX975	001	NAD	027 028 029
Rotel RSX965	001	Nakamichi	030 032 033
Rotel RSX965RDS	001	Onkyo	034 035 036 037
Rotel RTC965	001		038
Rotel RSP976	001 002	Pioneer	039 040 041 042
Rotel RT955	001		043 044 045
Rotel RA985	001 002	Proceed	046
Rotel RC995	001 002	Sony	046 047 048 049
Rotel RC972	001 002		050 051 052 053
Rotel RSP985	001 002	Yamaha	054 055
Rotel RSP980	001 002		056 057 058

CD

Rotel RCD930	001
Rotel RCD951	001
Rotel RCD971	001
Rotel RCD991	001
Rotel RCD950	001
Rotel RCC945	001
Rotel RCC955	001
Rotel RCD970	002
Rotel RCD975	002
Rotel RCD855	002
Rotel RCD865	002
Rotel RCD955	002
Rotel RCD965	002
Rotel RCD945	002
Rotel RCC935	003
Rotel RCC940	003
Rotel RCD940	003
Rotel RCD990	004
Rotel RMZ955	005
Adcom	006 007
Arcam	008
Denon	009 010
JVC	011 012 013 014
	015 016
Krell	017
Marantz	018 019 020 021
	022 023 024 025

DVD

Rotel	012
Denon	001
JVC	012
LG	010
Magnavox	013
Mitsubishi	002
Panasonic	003
Philips	013
Pioneer	004
Proscan	005 006
RCA	005 006
Samsung	011 015
Sony	007
Toshiba	008
Yamaha	009

LDP

Daewoo	024
Denon	030
Goldstar	027
Kenwood	025
Magnavox	026
Optimus	032
Panasonic	021
Philips	026
Pioneer	020 034
RCA	031
Realistic	032
Samsung	023 029
Sharp	025 028
Sony	022
Technics	021
Toshiba	025
Yamaha	033

TAPE

Rotel RD960	001
Rotel RMZ955	003
Denon	011 012
Pioneer	004 007 008
Pioneer (LD)	002
Yamaha	005 006 009

TV

Admiral	072 081 161
Akai	001
Ampro	073
Anam	043 055 056 080
	131
AOC	001 004
Candle	001 003 004
Cetronic	043
Citizen	001 003 004 101
	143
Classic	043
Concerto	004
Contec	043
Coronado	143
Crown	143
Curtis Mathes	001 004 101 143
CXC	043
Daewoo	004 055 076 103
	111 114 127 143
Daytron	004 143
Dynasty	043
Electrohome	024 143
Emerson	001 004 005 028
	043 048 076 096
	143 155
Fisher	007 057
Funai	028 043
Futuretech	043
GE	004 034 056 073
	130 144 155 160
	161
Goldstar	004 106 127 143
Grundig	004 007 010 011
	012 023 075 143
	158 163 203 204
	205 207 209
Hallmart	004
Infinity	164
JBL	164
JCP	001
JCPenny	004 024 030 065
	101 143 160
JVC	034 038 070
Kenwood	001 070
Kloss	059
KTV	043 143
Lodgenet	072
Logik	072
Luxman	004
LXI	007 015 052 081
	160 164
Magnavox	001 003 004 022
	059 060 063 127
	164
Marantz	001 164
Mitsubishi	004 024 109
MTC	001 004 101

NAD	015 025
NEC	001 019 024 056
	130 134
Nikei	043
Onking	043
Onwa	043
Optonica	019 081
Panasonic	034 056 080 164
Philco	001 003 004 024
	056 059 060 063
	127 143 164
Philips	001 003 004 005
	038 059 093 164
	180 181 182 183
	184 185 186 187
	188 189 190 192
Pioneer	004 023 025 135
	176
Portland	004 143 144 160
	161
Proton	004 131 143 171
	173
Quasar	034 056
Radio Shack	004 019 127 143
RCA	001 004 023 024
	056 065 144 152
	156 160 161
Realistic	007 019
Runco	072 168 169
Sampo	001 004
Samsung	004 101 127 133
	143 160
Sanyo	007 057 082
Scott	004 028 043 048
	143
Sears	004 007 015 028
	030 057 082 094
	143 160
Sharp	004 014 019 022
	028 143 175
Signature	072
Sony	070 126
Soundesign	003 004 028 043
SSS	004 043
Sylvania	001 003 059 060
	063 127 160 164
Symphonics	052
Tandy	081
Tatung	056
Technics	034 080
Techwood	004
Teknika	003 004 024 028
	043 072 101 143
Telerent	072
Thomson	194 195 196 197
	198 199 200 201
TMK	004
Toshiba	015 030 101
Television	143
Vidikron	174
Vidtech	004
Wards	004 019 028 060
	063 072 164
Yamaha	004
York	004
Yupiteru	043
Zenith	072 073 095 103

VCR

Aiwa	034 043
Ampro	072
Anam	031
Audio Dynamics	012 023 043
Broksonic	035 037
Canon	031
Craig	001 040
Curtis Mathes	031 041
Daewoo	005 010 017 111 117
DBX	012 023 043
Dynatech	034 053
Electrohome	059
Emerson	006 017 029 031 034 035 037 101 131 153
Fisher	001 008 009 010
Funai	034
GE	031 072 107 109 144 147
Go Video	132
Goldstar	004 012 101
Grundig	160 162 163 164 165 166
Harman Kardon	012
Hitachi	018 026 034 043 150
Instant Replay	031
JCL	031
JCPenny	004 012 040 101
Jensen	043
JVC	012 031 043 048 055 060 130 150 152
Kenwood	014 034 048
Lloyd	034
LXI	001 004 009 017 034
Magin	040
Magnavox	031 034 041 067
Marantz	012 031 067 069
Marta	101
Matsui	030
MEI	031
Memorex	001 010 014 031 034 040 053 072 101
MGA	059
Minolta	004
Mitsubishi	004 059 061
MTC	034 040
Multitech	034
NEC	012 023 043 048
Nordmende	043
Optonica	053 054
Panasonic	070
Pentax	004 031
Philco	031 034 067
Philips	031 034 054 067 101 162 166 167 168 169 170
Pilot	101
Pioneer	004 021 048
Pulsar	072
Quartz	014
RCA	004 034 040 041 107 109 144 147

Realistic	001 008 010 014 030 034 040 053 054 101
Ricoh	058
Runco	072
Salora	014
Samsung	017 040 107 109 113
Sansui	043 048
Sanyo	001 010 014 040
Scott	017 037 131
Sears	001 004 008 009 010 014 017 081 101
Sharp	031 054
Sony	001 009 031 052 056 057 058
Soundesign	034
STS	004
Sylvania	031 034 059 067
Symphonic	034
Tandy	010 034
Tatung	043
Teac	034 043
Technics	031 070
Teknika	031 034 101
Thomas	034
Thomson	177 178
TMK	006
Toshiba	004 008 017 059 082 131
Totevision	040 101
Unitech	040
Vector Research	012
Victor	048
Video Concepts	012 034
Videosonic	040
Wards	001 004 017 031 034 040 053 054 131
Yamaha	012 034 043
Zenith	034 048 056 058 072 080 101

SAT

GE	001
Echostar	006
Hitachi	011 012
Hughes	003
Panasonic	013
RCA	001
Sony	004
Toshiba	008

CABLE

Americast	005
Jerrold	006 007
Pioneer	001 002 003
Scientific-Atlanta	004
Tocom	010
Zenith	008 009



Rotel Control Commands



Codes de Commande



Gerätetasten und Codenummern für Rotel-Geräte



Ordenes de Control



Comandi di controllo Rotel



Rotel Functie Commandos



Rotel kontrollkommandoer

Note: [SHIFT] button functions shown in italics

Remarque: les fonctions de la touche [SHIFT] sont données en italique.

Hinweis: Die mit der [SHIFT]-Taste zu aktivierenden Funktionen sind kursiv gedruckt.

Nota: Las teclas de función [SHIFT] se indican en cursiva.

Nota: Le funzioni del tasto [SHIFT] sono evidenziate in corsivo.

Attentie: (SHIFT) knop functies worden in italic getoond.

NB: Funksjonene under SHIFT-knappen er anvist i kursiv.

ROTEL

	RTC975/RSP975	RSX965/RTC965	RSP985	RTC940/950
	RA985/RT955	RSP980		
	RC995/972/RSP976	RT940/RTC970		
	AUDIO 001	AUDIO 002	AUDIO 003	
POWER	Power	Power [Pow]	Power	
VOL+	Volume +	Volume +	Volume +	
VOL –	Volume –	Volume –	Volume –	
MUTE	Mute [Preset]	Mute	Mute	
PLAY	Enter	Enter		
STOP	Dynamic	Stop		
SEARCH –	–	–		
SEARCH +	+	+		
PAUSE	C. Delay	Pause		
RECALL	Recall	Up		
GUIDE	Surround +	Surround +		
MENU	On Screen	Menu		
PRE CH	Sur. Delay	Down		
T/V	Band [T/Pre]	Band	Band	
CH +	Tuning +	Tuning +	Tuning +	
CH –	Tuning –	Tuning –	Tuning –	
0	0	0		
1	1	1	1	
2	2	2	2	
3	3	3	3	
4	4	4	4	
5	5	5	5	
6	6	6	6	
7	7	7	7	
8	8	8	8	
9	9	9		
10		10	Plus 8	
ENTER	Out. Balance	Enter		
MOVIE FILT	Movie Filter	Movie Filter		
5.1 CH	5.1 Channel	5.1 Channel *		
SELECT	Input Select	Center Focus		
BACK	Bal. Check	Back		
TUNER	Tuner	Tuner	Tuner	
CD	CD	CD	CD	
TAPE 1	Tape 1	Tape Monitor	Tape 1	
TAPE 2	Tape 2	Tape 2	Tape 2	
PHONO	Phono/LD	Phono/LD		
VIDEO 1	Video 1	Video 1		
VIDEO 2	Video 2	Video 2		
VIDEO 3	Video 3	Video 3		
VIDEO 4	Aux 1	Aux 1	Aux 1	
AUX/V5	Aux 2	Aux 2		
[SHIFT]	Off	Off		
ZONE	Zone/Rec	Zone/Rec		

RR-939B

	RMZ955	RCD991/971	RCD975/970/965
		RCD950/951/930	RCD955/945
		RCC945/955	
	AUDIO 004	CD 001	CD 002
POWER	Standby		
VOL+	Volume +		
VOL –	Volume –		
MUTE	Mute		
PLAY	Play	Play	Play
STOP	Stop	Stop	Stop
SEARCH –	Rewind	Search –	Search –
SEARCH +	Fast Forward	Search +	Search +
PAUSE		Pause	Pause
RECALL		Open/Close	
GUIDE		Track –	Track –
MENU		Track +	Track +
PRE CH			
T/V	Fav. Station	A – B	A – B
CH +	Preset +		
CH –	Preset –		
0		10	0
1		1 [Disc 1]	1
2		2 [Disc 2]	2
3		3 [Disc 3]	3
4		4 [Disc 4]	4
5		5 [Disc 5]	5
6		6 [Disc 6]	6
7		7	7
8		8	8
9		9	9
10		Plus 10	
ENTER		Disc Select	Disc Select
MOVIE FILT		Program	Program
5.1 CH		Time [Review]	Time [Review]
SELECT	Select	Clear [Scan]	Clear [Scan]
BACK	Back	Random [Rep]	Random [Rep]
TUNER	Tuner		
CD	CD		
TAPE 1	Tape/SAT		
TAPE 2			
PHONO			
VIDEO 1	Video/CD		
VIDEO 2	X		
VIDEO 3			
VIDEO 4			
AUX/V5			
[SHIFT]			

- * RTC970 requires [Shift] function for 5.1 CH input
- * On droit utiliser la fonction [SHIFT] pour commander l'entrée du canal 5.1 CH de l'appareil RTC970
- * El RTC-970 requiere la función [Shift] para la entrada de 5.1 canales
- * Beim RTC-970 muß für den 5.1-Eingang die [SHIFT]-Taste gedrückt werden
- * L'RTC-970 richiede la funzione [SHIFT] per l'ingresso del canale 5.1
- * RTC970 heeft een (SHIFT) functie voor de 5.1 ingang nodig
- * RTC-970 krever SHIFT-funksjon for 5.1 inngang

ROTEL

	RCC935 RCC940 RCD940	RCD990	RMZ955
	CD 003	CD 004	CD 005
POWER			
VOL+			
VOL -			
MUTE			
PLAY	Play	Play	Play
STOP	Stop	Stop	Stop
SEARCH -	Search -	Search -	Skip -
SEARCH +	Search +	Search +	Skip +
PAUSE	Pause	Pause	
RECALL		Open/Close	
GUIDE	Track -	Track -	
MENU	Track +	Track +	
PRE CH			
T/V			
CH +			
CH -			
0	0	0	
1	1 [Disc 1]	1	
2	2 [Disc 2]	2	
3	3 [Disc 3]	3	
4	4 [Disc 4]	4	
5	5 [Disc 5]	5	
6	6	6	
7	7	7	
8	8	8	
9	9	9	
10			
ENTER	Disc Select		
MOVIE FILT	Program	Program	Disc
5.1 CH	Time [Review]	Time [Review]	
SELECT	Clear [Scan]		
BACK	Random [Rep]	Random [Rep]	Random
TUNER			
CD			
TAPE 1			
TAPE 2			
PHONO			
VIDEO 1			
VIDEO 2			
VIDEO 3			
VIDEO 4			
AUX/V5			
[SHIFT]			

RR-939B

	RD960	Pioneer LD	RMZ955
	TAPE 001	TAPE 002	TAPE 003
POWER		Power	Power
VOL+			
VOL -			
MUTE			
PLAY	Play	Play	Play
STOP	Stop	Stop	Stop
SEARCH -	Rewind	Rewind	Rewind
SEARCH +	Fast Forward	Fast Forward	Fast Forward
PAUSE	Pause	Pause	
RECALL	Record	Open/Close	
GUIDE			
MENU			
PRE CH			
T/V			
CH +		Skip +	
CH -		Skip -	
0			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
ENTER			
MOVIE FILT			
5.1 CH			
SELECT			
BACK			
TUNER			
CD			
TAPE 1			
TAPE 2			
PHONO			
VIDEO 1			
VIDEO 2			
VIDEO 3			
VIDEO 4			
AUX/V5			
[SHIFT]			

	TV	VCR	CABLE
POWER	Power	Power	Power
VOL+	Volume +		Volume +
VOL -	Volume -		Volume -
MUTE	Mute		Mute
PLAY	Select	Play	Select
STOP	Down	Stop	Down
SEARCH -	Left	Rewind	Left
SEARCH +	Right	Fast Forward	Right
PAUSE	Up	Pause	Up
RECALL	Clear/Std.	Record	Exit
GUIDE	Display/Rec.		Guide
MENU	Menu		Menu
PRE CH	Prev. Channel		Prev. Channel
T/V	TV/VCR	TV/VCR	Switch
CH +	Channel +	Channel +	Channel +
CH -	Channel -	Channel -	Channel -
0	0		0
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
7	7		7
8	8		8
9	9		9
10			Pay Per View
ENTER	Enter		Enter
MOVIE FILT	Sleep Timer		Fav. Station
5.1 CH			Info
SELECT			Bypass
BACK			Music
TUNER			Page +
CD			Day +
TAPE 1			Day -
TAPE 2			Page -
PHONO			
VIDEO 1			
VIDEO 2			
VIDEO 3			
VIDEO 4			
AUX/V5			
[SHIFT]			

	DVD	SAT
POWER	Power	Power
VOL+	Volume +	Volume +
VOL -	Volume -	Volume -
MUTE	Mute	Mute
PLAY	Play	Select
STOP	Stop	Down
SEARCH -	Search -	Left
SEARCH +	Search +	Right
PAUSE	Pause	Up
RECALL	Open/Close	Exit
GUIDE	Guide	Guide
MENU	Menu	Menu
PRE CH	Return	Prev. Channel
T/V		Switch
CH +	Skip +	Channel +
CH -	Skip -	Channel -
0		0
1		1
2	Up	2
3		3
4	Left	4
5		5
6	Right	6
7		7
8	Down	8
9		9
10		
ENTER	Enter	Enter
MOVIE FILT	Sub. On/Off	Fav. Station
5.1 CH	Display	Info
SELECT	Clear	Next
BACK		Alt
TUNER		
CD		
TAPE 1		
TAPE 2		
PHONO		
VIDEO 1		
VIDEO 2		
VIDEO 3		
VIDEO 4		
AUX/V5		
[SHIFT]		

RR-939B

**REMOTE CONTROL
TÉLÉCOMMANDE
FERNBEDIENUNG
MANDO A DISTANCIA
COMANDO A DISTANZA
AFSTANDSBEDIENING
FJERNBETJENING**

The Rotel Co. Ltd.

10-10 Shinsen-Cho
Shibuya-Ku
Tokyo 150-0045
Japan

Phone: +81-3-5458-5325

Fax: +81-3-5458-5310

Rotel of America

54 Concord Street
North Reading, MA 01864-2699
USA

Phone: +1 978-664-3820

Fax: +1 978-664-4109

Rotel Europe

Meadow Road
Worthing, West Sussex BN11 2RX
England

Phone: +44 (0)1903 524 813

Fax: +44 (0)1903 524 831

Rotel Deutschland

Kleine Heide 12
D-33790 Halle/Westf.
Germany

Phone: +49 5201-87170

Fax: +49 5201-73370