

ROTEL



RR-1060

Universal Learning Remote Control

Télécommande universelle à apprentissage de commandes
Spanish

Telecomando universale programmabile
Lernfähige Universalfernbedienung

Nederlands

Programmerbar fjärrkontroll

Controlo remoto universal de aprendizaje

Универсальный обучаемый пульт дистанционного управления



Rotel products are designed to comply with international directives on the Restriction of Hazardous Substances (RoHS) in electrical and electronic equipment and the disposal of Waste Electrical and Electronic Equipment (WEEE). The crossed wheeled bin symbol indicates compliance and that the products must be appropriately recycled or processed in accordance with these directives.

Tous les appareils Rotel sont conçus en totale conformité avec les directives internationales concernant les restrictions d'utilisation de substances dangereuses (RoHS) pour l'environnement, dans les équipements électriques et électroniques, ainsi que pour le recyclage des matériaux utilisés (WEEE, pour Waste Electrical and Electronic Equipment). Le symbole du conteneur à ordures barré par une croix indique la compatibilité avec ces directives, et le fait que les appareils peuvent être correctement recyclés ou traités dans le respect total de ces normes.

Los productos Rotel están diseñados para satisfacer la normativa internacional en materia de Restricción del Uso de Sustancias Peligrosas (RoHS) en equipos eléctricos y electrónicos y eliminación de Desechos Procedentes de Equipos Eléctricos y Electrónicos (WEEE). El símbolo del carro de la basura tachado significa la plena satisfacción de la citada normativa y que los productos que la incluyen deben ser reciclados o reprocesados en concordancia con las misma.

Tutti i prodotti Rotel sono realizzati secondo le norme internazionali per il trattamento delle sostanze pericolose (RoHS - Restriction of Hazardous Substances) in apparecchi elettrici ed elettronici, e per lo smaltimento di prodotti elettrici ed elettronici (WEEE - Waste Electrical and Electronic Equipment). Il simbolo del cestino dei rifiuti con una croce sopra, indica la compatibilità con queste norme e che il prodotto deve essere opportunamente riciclato o smaltito in accordo con le direttive vigenti.

 
Rotel-Produkte entsprechen den internationalen Richtlinien über die Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten (Restriction of Hazardous Substances (kurz RoHS genannt)) und über Elektro- und Elektronik-Altgeräte (Waste Electrical and Electronic Equipment (WEEE)). Die durchgestrichene Mülltonne steht für deren Einhaltung und besagt, dass die Produkte ordnungsgemäß recycelt oder diesen Richtlinien entsprechend entsorgt werden müssen.

 
Rotel Producten worden zo ontworpen dat zij voldoen aan de internationale regels betreffende de beperking van milieuvriendelijke grondstoffen die gebruikt kunnen worden in elektrische en elektronische apparatuur. Het symbool met de vuilcontainer met het kruis erdoor betekent voor u dat u, wanneer u dit apparaat wilt afvoeren, dit moet doen volgens de regels die daarvoor hier gelden.

Rotels produkter är utformade för att följa de internationella direktiven RoHS (Restriction of Hazardous Substances) och WEEE (Waste Electrical and Electronic Equipment) som behandlar hur uttjänta elektriska och elektroniska produkter tas om hand. Symbolen med den överkorsade soptunnan innebär att produkterna måste återvinnas eller tas om hand enligt dessa direktiv.


Продукты Rotel спроектированы так, чтобы соответствовать требованиям международных директив по ограничению применения вредных веществ в электротехническом и электронном оборудовании (Restriction of Hazardous Substances - RoHS), а также по обращению с отслужившим свой срок электротехническим и электронным оборудованием (Waste Electrical and Electronic Equipment - WEEE). Изображение перечеркнутого мусорного бачка на колесах означает соответствие этим требованиям, а также то, что эти продукты должны быть вторично использованы (рециклированы) или же обработаны в соответствии с упомянутыми выше директивами.

Layout • Disposition des commandes
 Spanish • Disposizione dei tasti
 Aufbau • Dutch • Layout
 Apresentação
 Расположение органов управления

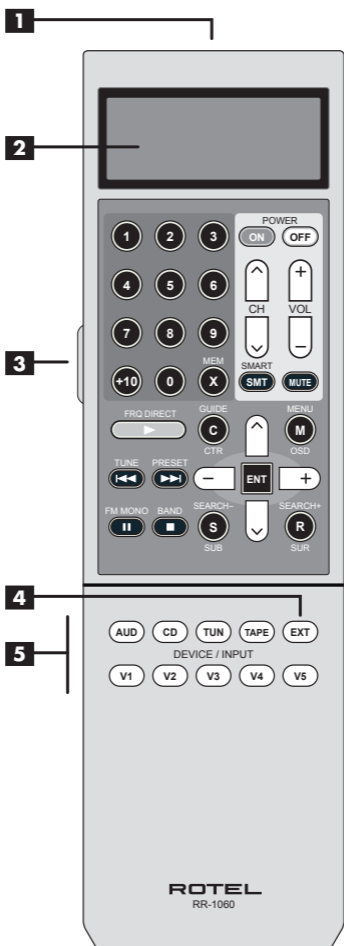


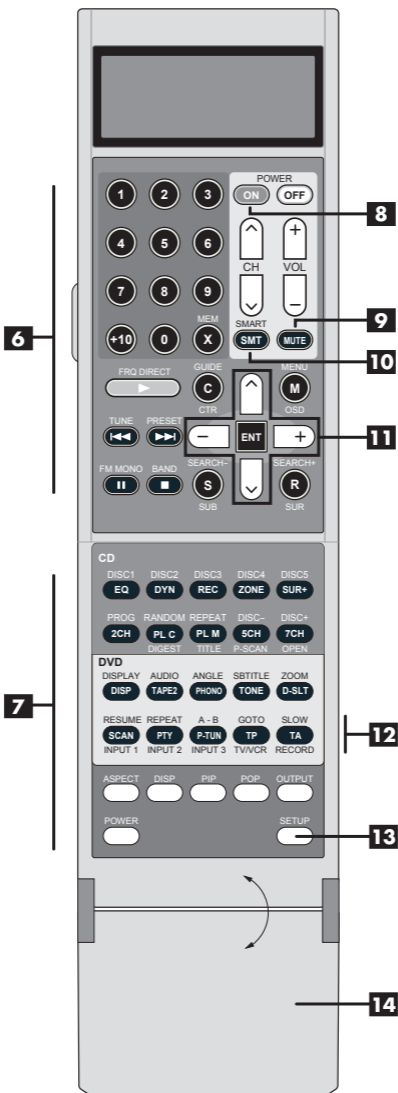

 Flip Down Cover • Volet rabattabile
Spanish • Sportellino apribile
Aufklappbare Abdeckung • Dutch
Uppfällbart lock • Tampa articulada
Откидывающаяся вниз крышка

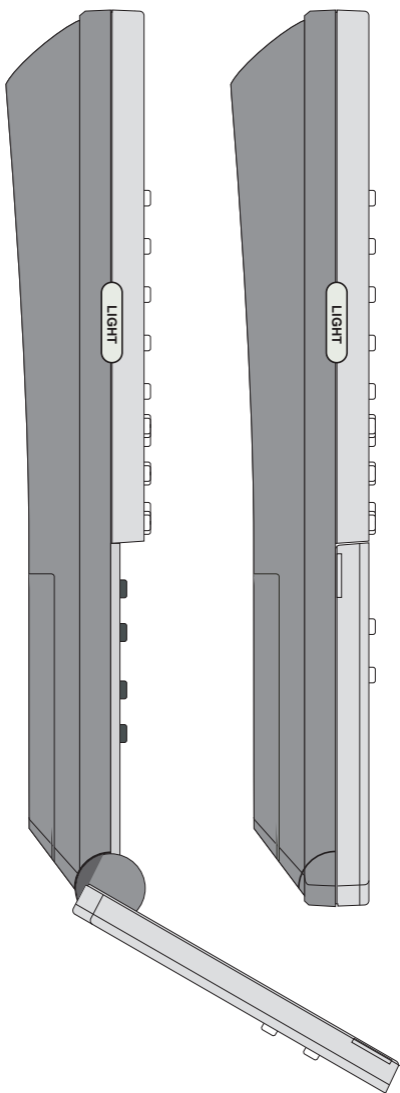

 **Character Map • Jeu des caractères
affichés • Spanish • Lista dei
caratteri Zeichenübersicht • Dutch
Teckenbeskrivning • Mapa de
Caracteres • Таблица символов**

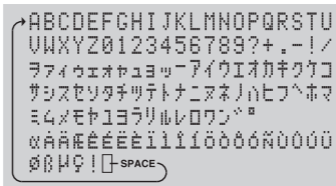

**Learning Commands • Apprentissage
de commandes • Spanish
Aprendimiento comandi
Lernen von Befehlen • Dutch
Inlärning av kommandon
Aprendizagem de Comandos
Таблица символов**



2 - 3 inches
5 - 8 cm



Contents

Layout	2
Flip Down Cover	4
Character Map	5
Learning Commands	5
Introduction	8
Key Features	8
Sensible Precautions	8
Battery Installation	8
Overview	9
IR Emitter/Sensor 1	9
LCD Display 2	9
Light Button 3	9
Folding Cover 14	10
Device/Input Buttons 5	10
EXT Button 4	11
Basic Command Buttons 6	11
Secondary Command Buttons 7	12
Multi-Step Buttons 12	12
Setup Button 13	12
Operating the RR-1060	13
Sending IR Commands 5 6 7	13
Smart Macro Commands 5 6 10	14
Multi-Step Button Operation 12	14
Backlighting 3	14
Programming	15
Programming Rotel components by Model Search 5 6 7 11 13	15
Programming by Brand Name 5 6 7 11 13	16
Programming by 4-Digit Code 5 6 7 11 13	18
Programming by Auto-Search 5 6 7 8 9 11 13	19

Learning Commands From Another Remote.....	20
Learning Commands 5 6 7 11 13	20
Multi-Step Button Learning 12	21
Smart Macro Programming.....	22
Smart Macro Programming 5 6 7 11 13	22
Clearing a Smart Macro 5 6 11 13	23
Changing a Smart Macro 5 6 11 13	23
Clearing learned commands	24
Clearing a Single Learned Command 5 6 7 11 13	24
Clearing All Learned Commands for a DEVICE/INPUT Button 5 11 13	24
Clearing All Learned Commands for ALL DEVICE/INPUT Buttons 11 13	25
Custom Labels	25
Switching between two pages of labels 11 13	25
Editing DEVICE/INPUT button labels 5 11 13	26
Editing COMMAND button labels 5 11 13	26
Changing Smart Macro labels 11 12 13	27
Additional Setup Options	28
Volume/Mute Punch-Through 9 11 13	28
Disabling the Beep Tone 11 13	29
Clone Function 11 13	29
Restore Factory Defaults 11 13	30

Introduction

The RR-1060 Universal Learning Remote Control can replace up to nine remote controls, operating A/V components from Rotel or other brands.

Key Features

- Programmed to operate Rotel surround sound processors, receivers, and DVD players.
- Simple programming for hundreds of components using built-in codes.
- Learning function to teach the RR-1060 commands from other remotes. Multi-step learning on five buttons for multiple command sequences from other remotes.
- Twenty Smart Macro keys send up to 20 commands with the press of two buttons.
- LCD DISPLAY provides visual feedback during programming and operation, including status indicators, and customizable labels for every command button.
- Backlighting for use in dark rooms along with optional beep whenever a button is pressed.
- Cloning feature for easy duplication of the entire command set from one RR-1060 to another.

Sensible Precautions

- The RR-1060 is rugged, but it is not indestructible. So please don't drop it!
- Do not expose the RR-1060 to moisture. To clean the RR-1060, use a soft, lint-free damp cloth. Avoid harsh cleaning solvents.
- Don't try to take the RR-1060 apart. Disassembly will void the warranty.

Battery Installation

Remove the RR-1060 and the 4 AAA batteries from the box. Turn the RR-1060 over and slide the cover off the battery compartment by compressing the release tab and lifting up. Place the four AAA batteries inside (follow the polarity illustrations on the bottom of the compartment) and replace the cover.

Overview

The RR-1060 is a universal learning remote control that can operate all of the components in your audio/video system. Control codes for Rotel components are already programmed. You can easily customize the RR-1060 to operate other components by selecting command sets for hundreds of components from the RR-1060's extensive database. See the *Programming* section of this manual for easy to follow instructions. For components not in the database or for additional commands, you can teach the RR-1060 commands using your existing remotes. See the *Learning* section of this manual for easy to follow instructions.

Once the programming is complete, select a component with the press of a button to turn the RR-1060 into the remote control for your CD player, TV, or VCR.

Here is the layout of the RR-1060:

IR Emitter/Sensor **1**

The IR Emitter/Sensor is located in the top edge of the RR-1060. It sends the IR commands and must be pointed at the desired component. It also receives IR codes from your other remotes during the LEARNING process.

LCD Display **2**

The LCD DISPLAY provides status information including the device currently selected and a customizable label for each button as it is pressed. The eight character alphanumeric display also provides simple prompts when programming the RR-1060. These indicators and prompts are noted in the appropriate sections of this manual.

Light Button **3**

The RR-1060 provides automatic backlighting in a dim room. The backlighting turns on whenever a button is pressed, including the LIGHT button on the side of the remote. The backlighting stays on for about 5 seconds each time a button is pressed.

NOTE: In a bright room, the backlighting function is disabled to save battery power.

Folding Cover 14

A folding cover conceals the buttons at the bottom of the RR-1060. These buttons provide extra command functions. Leave the folding cover in the closed position to simplify the RR-1060 for routine use. Open the cover to access the additional buttons.

Device/Input Buttons 5

Two rows of buttons on the folding cover (AUD, CD, TUN, TAPE, EXT and V1–V5) are used to select a component for control by the remote and, if desired, to activate the input for the component you are operating. How long the button is pressed determines whether a device is selected just for control by the remote or whether that input on the A/V receiver or surround sound processor is also activated.

To change the remote DEVICE only, press the button briefly (less than one second). This does not change the input selection.

To change the remote DEVICE and the input selection on the A/V receiver, press and hold the button for more than one second.

When a DEVICE/INPUT button is pressed, the label for that button appears in the LCD display. These labels can be customized, if desired. See the *Labeling DEVICE/INPUT Buttons* section of the manual for instructions.

The AUD button is pre-programmed to operate Rotel A/V receivers and surround sound processors. The V1 button is pre-programmed to operate Rotel DVD players. The CD button is pre-programmed to operate Rotel CD players. All other buttons are unprogrammed and can be used to learn the control codes of other remote controls.

The control codes of the AUD and V1 buttons can also be reprogrammed for other control codes. If you do so, you can restore the original Rotel control codes for these buttons. See the *Restoring Factory Defaults* section of this manual.

NOTE: *The DEVICE/INPUT buttons are also used in programming the RR-1060 and are available for storing and sending Smart Macros (automatic sequences of up to 20 learned commands).*

EXT Button 4

The EXT button is a special input selection button for Rotel audio/video receivers or surround sound processors. It is used to select the multi-channel analog inputs when playing SACD or DVD-A discs. This bypasses the digital/analog processing in the receiver or surround sound processor.

Press and hold the EXT button for more than one second to select the multi-channel analog input on a Rotel A/V receiver. The EXT button contains a duplicate of the remote commands programmed in the V1 device. Therefore, you cannot program or learn command codes for the EXT button.

The V1 button should be used for Rotel or other DVD players, allowing you to select the normal input with the V1 button or the multichannel analog input with the EXT button. Both DEVICE/INPUT buttons contain the same remote codes.

Basic Command Buttons 6

This large group of buttons duplicates the functions on the remote controls for your audio/video components. Each button can store commands for nine different components, selected by pressing one of the DEVICE/INPUT buttons (AUD, CD, TUN, TAPE and V1–V5).

When using the RR-1060, first press the DEVICE/INPUT button for the desired component. Then, press COMMAND buttons to send the commands learned for that component.

At the top right of this group are basic command buttons such as Power On and Off, Volume, Channel Selection and Muting. The Smart Macro button is also in this group. See the *Smart Macro Programming* section of this manual for more information.

At the top left of this group are twelve numeric keypad buttons that are used to make direct track selections on a CD or DVD player or direct channel selections on a TV, cable decoder, satellite receiver, etc.

At the bottom right are nine buttons that duplicate the cursor functions for cable or satellite TV receiver or audio/video components plus four round buttons are for extra functions, such as Last Channel, Viewing Guide, etc.

At the bottom left are five oval buttons that duplicate the basic transport control functions (Play, Fast Forward, Pause, etc.) of a CD player, DVD player or video tape recorder.

NOTE: *The numeric buttons, 0 – 9, are also available for sending Smart Macros.*

Secondary Command Buttons **7**

Under the folding cover is a group of buttons which provide secondary command functions. Open the folding cover to access these buttons.

The function of these buttons varies depending on the device selected with the DEVICE/INPUT buttons. For example, the top two rows have commands for A/V receivers (see labels printed on the buttons) or commands for CD players (see labels printed above and below the buttons). The two rows below these have commands for A/V receivers (see labels printed on the buttons) or commands for DVD players and VCRs (see labels printed above and below the buttons). The bottom two rows of buttons include commands for TVs.

Multi-Step Buttons **12**

In addition to normal functions, the five buttons labeled SCAN, PTY, P-TUN, TP and TA provide a special option – learning up to three commands on a single button from another remote. The first command is sent when the button is pressed once, the second command is sent the next time the button is pressed, and the third command is sent the third time the button is pressed. See the *Learning Multi-Step Buttons* section for information.

Setup Button **13**

The SETUP button in the lower right corner under the folding cover, is used to enter the setup mode for programming, learning, relabeling, storing macros, and other configuration functions.

Operating the RR-1060

This section of the manual explains the basic operation of the RR-1060 and most of its standard features.

NOTE: The AUD DEVICE/INPUT button of the RR-1060 is pre-programmed with control codes for Rotel A/V receivers or surround sound processors. The V1 button is pre-programmed to operate Rotel DVD players. The CD button is pre-programmed to operate Rotel CD players. The other DEVICE/INPUT buttons (TUN, TAPE and V2 – V5) are unprogrammed. You must program or learn commands for these DEVICE/INPUT buttons.

Sending IR Commands **5** **6** **7**

Instead of putting down one remote and picking up another, you simply press a button on the RR-1060 to convert it from the remote control for your CD player to the remote control for your TV set. Here's how:

1. Press a DEVICE/INPUT button (for under one second) to activate the command set for the desired component. For example, press the AUD button to control a Rotel surround processor. The label for your selection appears in the display. The selected command set remains active until you press a different DEVICE/INPUT button.
2. Press a COMMAND button to send an IR command to the component you have selected. For example, press the POWER ON button to turn on a Rotel surround processor. The label for the COMMAND button appears in the display. If the label "NO DATA" appears in the display, the button has no learned command for that DEVICE.

NOTE: The default labels that appear in the display match the button labels. You can customize the labels for every DEVICE/INPUT and COMMAND button.

Remember that the COMMAND buttons duplicate controls on many different types of audio/video components. Their function depends on the type of component selected. Make sure that you have pressed the correct DEVICE/INPUT button and use the button labels as guides.

When a button is pressed, a beep tone confirmation is heard. This feature can be disabled. See the *Disabling the Beep Tone* section of the manual. When an IR command is being sent, a triangular indicator appears in the upper right corner of the LCD display and the label for the command is shown in the display. These labels can be customized. See the *Labelling Command Buttons* section of this manual. If a button is pressed that has no command, the LCD shows NO DATA.

Smart Macro Commands 5 6 10

Twenty of the buttons on the RR-1060 (the 10 DEVICE/INPUT buttons plus the number buttons 0 – 9) can store multiple command macro sequences – for example, a sequence that turns on the TV set, selects channel 5, turns on the surround processor, and selects the TV input. A macro sequence is sent by pressing the SMART button followed by the button where the macro is stored:

1. Press the SMART button. A SMART? prompt appears in the LCD.
2. Press the button where the Smart Macro sequence is stored.

NOTE: *If you push a Smart Macro button that has not been programmed, the word EMPTY followed by the name of the button appears in the display and the remote returns to normal mode.*

Multi-Step Button Operation 12

The five buttons labelled SCAN, PTY, P-TUN, TP, and TA provide a special option – the ability to learn up to three different commands. The first command is sent when the button is pressed once, the second command is sent the next time the button is pressed, and the third command is sent the third time the button is pressed.

Backlighting 3

In a dark room, the RR-1060 automatically activates its backlighting feature for 5 seconds when a button is pressed. Press the LIGHT button to manually turn on the backlighting in a dim room. This button is disabled in a bright room.

Programming

The RR-1060 contains hundreds of command sets for components. Programming the remote involves selecting the command sets that correspond to the components in your system and assigning each of them to one of the nine DEVICE buttons by entering the 4-digit code for that component. This need only be done once during initial setup of the RR-1060.

There are four ways of finding the correct 4-digit code. The easiest way to program Rotel components is to search by the model number. For other components, you can search the database by the brand name of your component. A third option is to try the codes available for your brand from the list of 4-digit codes. Finally, you can search the database for ALL codes, until you find one that works.

NOTE: Programming the RR-1060 is done in a menu-driven setup mode accessed by pressing the SETUP button, then using the UP/DOWN and +/- cursor keys to navigate menus, and pressing the ENT button to confirm selections. At any time during the process, you can exit the setup mode and return to normal operation by pressing the SETUP button.

Programming Rotel components by Model Search **5 6 7 11 13**

You can find the correct 4-digit code for Rotel components by searching the database for the model number of your Rotel Audio, DVD, or CD component.

When using the model search, the DEVICE/INPUT buttons can only be programmed for specific types of components as follows:

- AUD:** Audio components only
- CD:** CD players only
- TUN:** Audio, DVD, CD only
- TAPE:** Audio, DVD, CD only
- V1:** DVD only
- V2:** Audio, DVD, CD only
- V3:** Audio, DVD, CD only
- V4:** Audio, DVD, CD only
- V5:** Audio, DVD, CD only

1. Press the DEVICE/INPUT button where you wish to program this component's code (AUD, CD, TUN, TAPE and V1–V5).
2. Press the SETUP button (the LCD displays SETUP). Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SETUP MODEL appears in the display. Press the ENT button to confirm.
4. Press the UP/DOWN cursor buttons until the type of component you are searching for appears in the display (AUD, DVD, CD) Press the ENT button to confirm. The first available model number appears in the display.
5. Use the UP/DOWN cursor buttons to scroll through the list until the desired model number appears. Press ENT to confirm the selection.
6. Press any COMMAND button to test the new code. For example, when programming a CD player, you could push the PLAY button to see if the disc begins play. If the command works, press ENT to save the the code selection and return to normal operation.

NOTE: You can press the SETUP button to exit the programming at any time.

Programming by Brand Name **5 6 7 11 13**

You can also use the following search method to find and test the code numbers available for your brand of component. When using the brand search, the DEVICE/INPUT buttons can only be programmed for specific types of components as follows:

- AUD:** *Rotel audio components only*
- CD:** *CD players only*
- TUN:** *Any component*
- TAPE:** *Any component*
- V1:** *DVD only*
- V2:** *Any component*
- V3:** *Any component*
- V4:** *Any component*
- V5:** *Any component*

To program using the brand search:

1. Press the DEVICE/INPUT button where you wish to program this component's codes (AUD, CD, TUN, TAPE and V1–V5).
2. Press the SETUP button (the LCD displays SETUP). Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SETUP BRAND appears in the display. Press the ENT button to confirm.
4. Press the UP/DOWN cursor buttons until the type of component you are searching for appears in the display (TV, VCR, SAT, CTV, DVD, CD, etc.) Press the ENT button to confirm. The first available brand starting with the letter A appears in the display.
5. Select the first letter of your component's brand, using the +/- cursor buttons. Then, use the UP/DOWN cursor buttons to scroll through the list until the desired brand appears. Press ENT to confirm.
6. The brand along with the first available 4-digit code for that brand appears in the LCD.
7. Press any COMMAND button to test the first available code for your brand. For example, if you are testing a code for a TV, you could press the CH UP button to confirm that the channel changes on the TV. The 4-digit code being tested is shown in the display.

If the command button operates the component, you have found a code that may work. You can test additional commands by pressing more COMMAND keys. If successful, press the ENT button to save the code.

If the command button does not work, press the UP cursor button again to test the next code for that brand, with the new 4-digit code being tested shown in the display. Continue testing codes until you find one that works, saving it by pressing the ENT button.

8. Press the SETUP button at any time to exit the programming mode.

Programming by 4-Digit Code **5** **6** **7** **11** **13**

Find your audio/video component in the 4-digit code list. Then proceed as follows:

1. Press the DEVICE/INPUT button where you wish to program this component's codes (AUD, CD, TUN, TAPE and V1–V5).
2. Press the SETUP button (the LCD displays SETUP). Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SETUP CODE appears in the display. Press the ENT button to confirm.
4. Input the 4-digit code using the 0–9 buttons. Upon entering a valid code, the phrase CODE OK will be shown. If the code is not valid, the LCD will show CODE INVALID.
5. Once a valid code has been entered, test the code by sending pressing any COMMAND button. For example, when testing a DVD code, you could press the PLAY button. If the code works, skip to the next step. If the code does not work properly, repeat the procedure from **step 4**, using the next 4-digit code listed for the brand of component.
6. Press the SETUP button to exit to programming mode.

Programming by Auto-Search

5 6 7 8 9 11 13

To search for a code from the full list of available 4-digit codes for a type of component:

1. Press the DEVICE/INPUT button where you wish to program this component's codes (AUD, CD, TUN, TAPE and V1–V5).
2. Press the SETUP button (the LCD displays SETUP). Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SETUP A. SEARCH appears in the display. Press the ENT button to confirm.
4. Press the UP/DOWN cursor buttons until the type of component you are searching for appears in the display (TV, VCR, SAT, CTV, DVD, CD, etc.) Press the ENT button to confirm.
5. Press and release the POWER ON button to advance to the next code.
6. Test the code by pressing any COMMAND buttons suitable for that component. For example, if testing a CD player, press the PLAY button.

If the commands work for the desired component, you have found a code that may work. If successful, press the DEVICE/INPUT button to save the code.

If the commands do not work, press and release the POWER ON button again to advance to the next available code for that component, with the new 4-digit code being tested shown in the display. Continue pressing the POWER ON button and testing codes until you have found a code that works, saving it by pressing the DEVICE/INPUT button.

7. Press the SETUP button at any time to exit the programming mode.

NOTE: You can return to the previous 4-digit code by pressing the MUTE command button.

Learning Commands From Another Remote

If you are unable to find a command set using the Programming steps, or if you need additional commands, you can teach the RR-1060 commands directly from your existing remotes. This procedure is called Learning.

Learning Commands **5** **6** **7** **11** **13**

To teach the RR-1060 the commands from one of your other remotes, place the two remote controls end to end as shown in the illustration at the front of this manual. The IR signals sent by the other remote must be aimed at the IR emitter/sensor of the RR-1060.

1. Press the DEVICE/INPUT button where you wish to learn this component's codes (AUD, CD, TUN, TAPE and V1-V5).
2. Press the SETUP button (the LCD displays SETUP). Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SETUP LEARNING appears in the display. Press the ENT button to confirm.
4. Press the COMMAND button that you wish to learn (Power On, CH UP/DOWN, etc.). The name of that COMMAND button appears in the display beneath the word LEARNING.
5. Press and hold the corresponding button on the original remote until the display shows "OK" indicating that the command has been learned.

If the LCD shows an ERROR message, the command was not successfully learned. Try again.

If the LCD shows a NO DATA message, no signal was received from the original remote. Adjust the position of the two remotes and try Step 3 again.

6. To learn additional buttons, repeat steps 4 and 5.
7. Press the SETUP button to exit the learning mode when you are finished.

NOTE: The RR-1060 has enough memory to learn 600 commands. If the memory capacity is reached, the LCD displays FULL when you attempt to learn a command.

Multi-Step Button Learning **12**

The five buttons labeled SCAN, PTY, P-TUN, TP, TA provide a special option – the ability to learn up to three different commands on a single button. During operation, the first command is sent when the button is pressed once, the second command is sent the next time the button is pressed, and the third command is sent the third time the button is pressed.

To program a multi-step button using the SCAN button as an example:

1. Follow the first five steps under “Learning Commands” in the previous section (pressing the desired SCAN button instead of a COMMAND button in Step 4) to program the first command for the SCAN button.
2. Press the SCAN button a second time. “S1-2” shows in the display. Press and hold the next button on the original remote until the “OK!” confirmation appears.
3. To learn a third command, press the SCAN button a third time. The display shows “S1-3” indicating that it is ready to learn the third command. Press and hold the next command button on the original remote until the “OK!” confirmation appears.

NOTE: To change the programming of any command for a multi-step button, it is necessary to start over beginning with the first command.

Smart Macro Programming

Twenty of the buttons on the RR-1060 (the 10 DEVICE/INPUT buttons plus the numeric buttons 0–9) can store multiple command macro sequences – for example, a sequence that turns on the TV set, selects channel 5, turns on the surround processor, and selects the TV input.

Smart Macro Programming

5 6 7 11 13

A macro sequence is sent by pressing the SMART button followed by the button where the macro is stored. To program a macro sequence, first make sure that all of the desired commands have already been programmed or learned by the RR-1060 – the Smart Macro feature simply records a sequence of individual RR-1060 button commands.

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until SETUP SMART appears in the display. Press the ENT button to confirm.
3. When the LCD shows the prompt ADD SMART?, press one of the Smart Macro keys (AUD, CD, TUN, TAPE, EXT, V1–V5, or 0–9). The LCD briefly shows ADD followed by the name of the Smart Macro key being programmed.
4. When the LCD shows the prompt STEP 1, press the first COMMAND button in the Smart Macro sequence.
5. When the LCD shows the prompt STEP 2, press the second command in the macro sequence.
6. Continue until the Smart Macro sequence is complete (up to a maximum of 20 commands). Press the SETUP button to finish the Smart Macro programming.
7. A confirmation message, CONFIRM? appears in the LCD. Use the UP/DOWN buttons to select either YES (to save the new Smart Macro) or NO (to erase the Smart Macro programming). Press the ENT button to confirm.

NOTE: Smart Macro buttons can have custom labels. See the Custom Labels section of the manual for information.

Clearing a Smart Macro **5 6 11 13**

To clear a previously saved Smart Macro:

1. Press the SETUP button and then press the UP/DOWN cursor buttons until SMART appears in the display. Press ENT.
2. Press the UP/DOWN cursor buttons until SMART CLEAR appears in the display. Press the ENT button to confirm. CLEAR SMART? appears in the display.
3. Press the Smart Macro button to be cleared (for example, press 1 to clear a Smart Macro stored in the 1 button).
4. A confirmation appears in the LCD. Use the UP/DOWN buttons to select YES (to clear the Smart Macro) or NO (to keep the Smart Macro). Press the ENT button to confirm.

NOTE: *If you attempt to clear unprogrammed Smart Macro button, the word EMPTY appears and the remote returns to normal mode.*

Changing a Smart Macro **5 6 11 13**

To change a previously saved Smart Macro:

1. Press the SETUP button. Then, press the UP/DOWN cursor buttons until SMART appears in the display. Press ENT.
2. Press the UP/DOWN cursor buttons until SMART EDIT appears in the display. Press the ENT button to confirm. EDIT SMART? appears in the display
3. Press the Smart Macro button to be changed (for example, press 1 to change a Smart Macro stored in the 1 button).
4. Use the UP/DOWN buttons to select the STEP # you wish to change, for example STEP 10. Press the ENT button to confirm.
5. When the CHG TO ? prompt appears, press the new command button for that step.
6. Repeat steps 5 and 6 to change any other commands, then press the SETUP button.

7. A confirmation appears in the LCD. Use the UP/DOWN buttons to select either YES (to change the command) or NO (to discard the changes). Press ENT to confirm.

NOTE: *If you attempt to change an unprogrammed Smart Macro button, the word EMPTY appears and the remote returns to normal mode.*

Clearing learned commands

You can clear a single learned command, a multi-step command, all of the learned commands for a single DEVICE/INPUT button, or all of the learned commands for all DEVICE/INPUT buttons:

Clearing a Single Learned Command

5 6 7 11 13

1. Press the DEVICE/INPUT button where the learned command is stored.
2. Press the SETUP button (the LCD displays SETUP). Press the UP/DOWN cursor buttons until EDIT appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until CLEAR ONE KEY appears in the display. Press the ENT button to confirm.
4. When the SELECT KEY prompt is displayed, press the command button you wish to clear.
5. A confirmation message appears in the LCD. Use the UP/DOWN buttons to select either YES (to clear the learned command) or NO (to keep command). Press the ENT button to confirm.

Clearing All Learned Commands for a DEVICE/INPUT Button **5 11 13**

1. Press the DEVICE/INPUT button where the learned command is stored.
2. Press the SETUP button (the LCD displays SETUP). Press the UP/DOWN cursor buttons until EDIT appears in the display. Press the ENT button to confirm.

3. Press the UP/DOWN cursor buttons until CLEAR ONE DEV appears in the display.
4. Press the ENT button to delete all learned commands for the DEVICE/INPUT button.

Clearing All Learned Commands for ALL DEVICE/INPUT Buttons

1. Press the SETUP button (the LCD displays SETUP). Press the UP/DOWN cursor buttons until EDIT appears in the display. Press the ENT button to confirm.
2. Press the UP/DOWN cursor buttons until CLEAR ALL DEV appears in the display.
3. Press the ENT button to delete all learned commands for all DEVICE/INPUT buttons.

Custom Labels

Whenever you press a button on the RR-1060, its name appears in the display. By default, the labels appearing in the LCD when a button is pressed match the printed labels for each button. There are two complete sets ("pages") of labels stored in the RR-1060. You can switch between the two. The first page of labels cannot be changed. The labels for the second page can be customized. This allows you to return to the default labels at any time by switching back to the first page.

Switching between two pages of labels 11 13

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until MULTI LANGUAGE appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until the desired set of labels (PAGE 1 or PAGE 2) appears in the display. Press the ENT button to confirm the selection.

Editing DEVICE/INPUT button labels **5 11 13**

To change the label for a button, make sure that you have selected the Page 2 set of labels (see above), then:

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until EDIT appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until EDIT DEVICE appears in the display. Press the ENT button to confirm.
4. Press the DEVICE/INPUT button (AUD, CD, TUN, TAPE, EXT, V1–V5) that you wish to re-label. The current label appears on the second line of the display.
5. Press the +/- buttons to select a letter in the label to change and the UP/DOWN cursor buttons to change the letter. The *Character Map* illustration shows the available characters. Labels can be up to 8 characters.
6. When the new label is complete, press the SETUP button to save the new label.
7. A confirmation message appears in the LCD. Use the UP/DOWN buttons to select either YES (to confirm the new label) or NO (to exit without making any changes). Press the ENT button to confirm the selection.

Editing COMMAND button labels **5 11 13**

To change the label for a button, make sure that you have selected the Page 2 set of labels, then:

1. Press the DEVICE/INPUT button (AUD, CD, TUN, TAPE, V1–V5) containing the COMMAND button you wish to relabel.
2. Press the SETUP button.
3. Press the UP/DOWN cursor buttons until EDIT appears in the display. Press the ENT button to confirm.
4. Press the UP/DOWN cursor buttons until EDIT KEY appears in the display. Press the ENT button to confirm.

5. Press the COMMAND button that you wish to relabel. The current label appears on the second line of the display.
6. Press the +/- buttons to select a character to change and the UP/DOWN cursor buttons to change the letter. The "Character Map" illustration shows the available characters. Labels can be a maximum of 8 characters.
7. When the new label is complete, press the SETUP button to save the new label.
8. A confirmation message appears in the LCD. Use the UP/DOWN buttons to select either YES (to confirm the new label) or NO (to exit without making any changes). Press the ENT button to confirm the selection.

Changing Smart Macro labels 11 12 13

To change the label for a Smart Macro:

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until SMART appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SMART RENAME appears in the display. Press the ENT button to confirm.
4. Press the Smart Macro button that you wish to relabel. The current label appears on the second line of the display. If the button does not have a Smart Macro programmed, the word EMPTY appears in the display.
5. Press the +/- buttons to select a character to change and the UP/DOWN cursor buttons to change the letter. The "Character Map" illustration shows the available characters. Labels can be a maximum of 8 characters.
6. When the new label is complete, press the SETUP button to save the new label.
7. A confirmation message appears in the LCD. Use the UP/DOWN buttons to select either YES (to confirm the new label) or NO (to exit without making any changes). Press the ENT button to confirm the selection.

Additional Setup Options

Volume/Mute Punch-Through **9 11 13**

In many systems, the volume is adjusted at the TV set or the A/V processor. For convenience, the RR-1060 has a Volume Punch-Through feature that copies the volume and mute commands from either the TV device or AUD to DEVICE/INPUT buttons for other components such as CD players, VCRs, SAT receivers, and DVD players. After enabling this feature, volume and mute controls for your choice of the TV or A/V processor are always available even when one of these other DEVICE/INPUT command sets is active.

To enable the Volume Punch-through feature:

1. Press the SETUP button.
2. Use the UP/DOWN cursor buttons to select PUNCH THROUGH on the LCD display. Press the ENT button to confirm.
3. When the prompt SELECT appears in the display (after about 2 seconds), use the UP/DOWN cursor buttons to select either AUD or TV. This selection is the DEVICE/INPUT whose volume control you wish to use in other modes. Press ENT to confirm.
4. When the prompt TARGET appears in the display, use the UP/DOWN cursor buttons to select the DEVICE/INPUT where you want the volume and mute commands to be copied to. For example, if you want to use AUD volume even from the CD mode of the remote, select CD as the target. Press ENT to confirm.

The factory default setting for the Punch-Through feature is as follows:

AUD:	<i>AUD volume</i>
CD:	<i>AUD volume</i>
TUN:	<i>AUD volume</i>
TAPE:	<i>AUD volume</i>
V1:	<i>AUD volume</i>
V2:	<i>No Punch-Through</i>
V3:	<i>No Punch-Through</i>
V4:	<i>No Punch-Through</i>
V5:	<i>No Punch-Through</i>

Disabling the Beep Tone **11 13**

As shipped from the factory, the RR-1060 beeps as confirmation whenever a button is pressed. This feature can be disabled or enabled as follows:

1. Press the SETUP button (the LCD displays SETUP).
2. Press the UP/DOWN cursor buttons until BEEP SOUND appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until BEEP ON or BEEP OFF appears in the display. Press the ENT button to select the desired option.

Clone Function **11 13**

The CLONE function transfers all programming, learned commands, labels, and settings from one RR-1060 to a second RR-1060. To transfer the programming, place two RR-1060 remotes with their IR windows facing each other about 2 to 3 inches apart, then proceed as follows.

On the remote that will be receiving the data:

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until CLONE appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until RECEIVE appears in the display. Press the ENT button.

On the remote that will be sending the data:

1. Press the SETUP button (the LCD displays SETUP).
2. Press the UP/DOWN cursor buttons until CLONE appears in the display. Press the ENT button to confirm.
3. Press the UP/DOWN cursor buttons until SEND appears in the display. Press the ENT button.

The data transfer begins. The sending remote displays SENDING DATA. The receiving remote displays RECEIVING DATA. At the completion of the data transfer (which may take 4 or 5 minutes), one of the following confirmation messages appears in the display of the receiving RR-1060:

- If the data transfer is successful, the SEND OK prompt appears on the sending remote and RECEIVE OK appears on the receiving remote.
- If the data transfer is not successful, ERROR appears in the LCD on the receiving remote. and the unit reverts to normal operating mode.

After 30 seconds or when any button is pressed, the remotes return to normal operation.

NOTE: Do not attempt to use the CLONE function to transfer data from any remote other than another Rotel RR-1060.

Restore Factory Defaults **11 13**

You can restore the RR-1060 to the factory default configuration with a simple procedure described below. Restoring the factory configuration restores all of the preset code sets for DEVICE/INPUT buttons, clears all learned commands, restores all factory labels, restores the factory punch-thru settings, and turns the beep tone on.

1. Press the SETUP button.
2. Press the UP/DOWN cursor buttons until DEFAULT SETTING appears in the display. Press the ENT button to confirm.
3. A confirmation message appears in the LCD. Use the UP/DOWN buttons to select either RESET YES (to restore the factory defaults) or RESET NO (to exit without making any changes). Press the ENT button to confirm the selection.
4. In a few seconds, a RESET OK prompt in the LCD will confirm the restoring of factory defaults.

NOTE: Smart Macros are not reset by restoring factory defaults. Use the Clearing a Smart Macro instructions to delete stored Smart Macros.



ROTEL

The Rotel Co. Ltd.

10-10 Shinsen-Cho
Shibuya-Ku
Tokyo 150-0045
Japan

Phone: +81 3-5458-5325

Fax: +81 3-5458-5310

Rotel of America

54 Concord Street
North Reading, MA 01864-2699
USA

Phone: +1 978-664-3820

Fax: +1 978-664-4109

Rotel Europe

Dale Road
Worthing, West Sussex BN11 2BH
England

Phone: +44 (0)1903 221600

Fax: +44 (0)1903 221525

Rotel Deutschland

Kleine Heide 12
D-33790 Halle/Westf.
Germany

Phone: +49 05201-87170

Fax: +49 05201-73370

www.rotel.com

082 OM RR-1060 • 092205

English • Français • Italiano • Deutsch

Svenska • Portugese • Русский



ROTEL

Code List
Le Codes
Lista de Códigos Numéricos
Elenco codici
Liste der Codes
Code Lijst
Kodlista
Таблица Кодов



RR-1060

Universal Learning Remote Control
Télécommande Universelle
Mando a Distancia Universal
Telecomando Universale Programmabile
Lernfähige Universalfernbedienung
Leerbare Universele Afstandsbediening
Upplärningsbar Fjärrkontroll
Универсальный Обучаемый Пульт

Contents

TV	3
VCR	17
SAT	21
CTV	25
DVD	27
CD	30
AMP	31

TV

ACCENT	1521
ACTION	0171 0771 1031 1521 3161 3681 4241
ADMIRAL	0661 1031 1521 1871 2051 2151 2391 2581 3151 3991 4041 4551 4651
ADVENTURA	1661
ADVENTURI	1661
ADYSON	0651 1031 3861 4241
AGAZI	0661
AGB	3831
AIKO	1521 4541
AKAI	0121 0161 1031 1521 1661 1961 1971 2061 2081 2091 2151 2251 2271 2401 2411 2741 2751 3061 3161 3891 4101 4181 4221 4241 4261 4461
AKIBA	4221
AKURA	0661 1031 1521 2281 2291 2681 4221
ALARON	4611
ALBA	0541 1031 1521 2681 3151 3321 3891 4221
ALBIRAL	3221 3331
ALCYON	2551
ALFA	1031
ALLORGAN	0521 3581 3861
ALLSTAR	1031
AMBASSADOR	4261
America Action	4621
AMERICAN HIGH	0771
AMERICANA	0771
AMPLIVISION	3861
AMSTRAD	0491 1521 2391 3431 4231
ANAM	4621
ANGA	4261
ANGLO	1521
ANITECH	0651 0661 1031 1521 2551 2561 3221 4211 4241
ANSONIC	1521 2681 3221
AOC	1031 4241 4441 4461
AR SYSTEM	0791 3391
ARC EN CIEL	3671 3681 4141
ARCAM	3861
ARCON	3121
ARISTONA	1031 4361
ART TECH	1031
ARTHUR-MARTIN	2131
ASA	2541 2551 2701 2921 2931 2941 3041 3991 4041
ASBERG	1031 2551 2561 3151 3221
ASORA	1521
ASTRA	1521
ASUKA	0661 3861 4221
ASWO	0971
ATLANTIC	1031 2441 2621 3581
ATLAS	0811
ATORI	1521
ATORO	1521
AUCHAN	2131
AUDIO TECHNICA	1761
AUDIOSONIC	0661 1031 1521 2681 3681 3861 4221
AUDIOTON	1521 3861
AUDIOVOX	1031 4541 4621 4641
AUSIND	2551
AUTOVOX	1981 2551 3571 3581 3861 3991 4371
AWA	0681 1271 1521
BANG	2751

BANG & OLUFSEN 3991 4051
 BASIC LINE 1031 1151 1221 1521 1981 4211 4221
 BASTIDE 3861
 BAUER 2751
 BAUR 0031 0041 0341 0811 0871 0901 0911 0941 1031
 1361 1521 1661 1671 1691 1701 1711 1741 1971
 1981 2061 2091 2151 2171 2591 2741 2821 2831
 2841 2851
 BAYSONIC 4621
 BEC 0171 1031 2061 3161 3831 3861
 BECRESE 0011 0161 0171 0341 0501 1031 1661 2061 2151
 2591 2921 3681 4101 4241
 BEKO 0891 1031 1181 1321 2661 2681 2911 3241 3281
 3711
 BELCOR 4441
 BELL & HOWELL 0311 1031 1871 4421 4581
 BENCHMARK-BEAUMARK 0771 1031 1521 4241
 BEON 1031 3151
 BEST 2661 2681
 BESTAR 1031 2191 2681
 BIGSTON 1521
 BLACK PANTHER 3221
 BLACK STAR 3941
 BLACKSTRIPE 0011 0021 0311 0341 0771 4101
 BLAUPUNKT 2741 2751 2771 2781 2791 2811 2821 2831 2851
 2871 2891 4181 4301 4311 4321 4331 4341
 BLUE SKY 1031 4221
 BONDSTEC 4371
 BOSCH 4301
 BOSCH-BAUER 2441
 BRADFORD 4621
 BRANDT 3671 3681
 BRANDT ELECTRONIQUE 3451 3521 3671 3681 4141
 BRAUN 3471
 BRENDSTAR 1521
 BRINKMANN 3151
 BRIONVEGA 1031 1121 2391 4041
 BRIORRYEGA 1031 3991
 BROCKWOOD 1661 2151 4101 4241 4261 4441
 BROKSONIC 1661 2151 4101 4241 4261 4651
 BROTHOR 0661
 BRUNS 1971 2091 2661 3211 3221 3991 4041
 BSR 0521 1911 2101
 BTC 4221
 BUSH 0541 0761 1031 1151 1911 2061 2181 2271 3321
 3891 4101 4221
 CAMPLE 1661 2151 4101 4241 4261
 CANDLE 4241 4461 4511
 CAPEHART 1031 3161 4101 4241
 CAPSONIC 0661
 CARNIVALE 4461
 CARREFOUR 1031 2551
 CARVER 1031 4501
 CASIO 0891
 CATHAY 1031
 CCI 0151
 CENTURION 1031
 CENTURY 3941 3951 3991 4041
 CGE 1521 2021 2271 2551 2561 3151 3941 3951 4331
 4351
 CGM 1521 4201
 CIE 0491 1501 1521 4381
 CIHAN 0891

CIMLINE 0541 1521
 CINERAL 4541 4641
 CIRCUIT CITY 1661 2151 4101 4241 4261
 CITIZEN 0011 0771 1031 4241 4461 4511 4521 4541
 CITY 1521
 CLARIVOX 2611 3201 3901 3941
 CLATRONIC 1521 2161 2441 2561 2671 3221 3861 3921 3941
 3951 4221
 COLORTYME 0771 1031
 COMPUTRON 1521
 CONCERTO 4511
 CONCORDE 1521
 CONDOR 0981 1031 1521 2441 2671 2681 3151 3221 3941
 CONIC 0171 1031 4101 4241
 CONRAC 3271
 CONTEC 1521 4061 4101 4121 4211 4211 4621
 CONTINENTAL EDISON 1581 3451 3671 3681 4141
 CORONADO 4241
 COSMEL 1521
 CRAIG 1031 4621
 CRIPTOVISION 2241
 CROSLEY 0171 1031 1661 2031 2551 2561 2681 3941 3951
 3991 4041 4101 4331 4501
 CROWN 1031 1521 1871 2151 2161 2551 2561 2661 2681
 2691 3221 4241 4621
 CRYSTAL 1031
 CS ELECTRONICS 3941 4221
 CTC 2441 3941
 CTC CLATRONIC 3151 3221 3941
 CURTIS MATHES 0011 0311 0771 1031 4101 4241 4421 4461 4471
 4481 4501 4511 4521 4561 4581 4641 4681 4711
 4621
 CXE 3861
 CYBERTRON 0811 1031 1471 1481 1501 1511 1521 3401 3861
 4241 4441 4541 4641 4661
 DAICHI 1521
 DAINICHI 4221
 DANSAL 4241
 DAWA 1031
 DAYTRON 0341 1521 4241 4441
 DE GRAAF 2151
 DECCA 1031 3171 3191 3841 4031 4121
 DENON 4561
 DENVER 1521
 DESMET 1031 1521 2441
 DIAMOND 1521
 DIXI 1031 1521 3211
 DORIC 2001
 DTS 1521
 DUAL 0891 1031 1521 1971 1981 2391 2591 2621 2641
 3861 4221 4391
 DUMONT 1661 2151 2551 2701 3151 3221 3861 3991 4041
 4101 4241 4261 4431 4441
 DYNAMIC 1521
 DYNATECH 1661 2151 3861 4101 4241 4261
 EATON 0771
 EB TELECOM 2241
 ECR 4101
 ELBE 0001 0561 2041 2161 2391 2631 3301 3901
 ELBIT 0881 1031
 ELCT 3221 3941 3991
 ELECS 1031
 ELECTRATUNE 4241

ELECTRO TECH 1521
 ELECTROBRAND 1661
 ELECTROHOME 0171 0311 1661 2151 4101 4241 4261
 ELEKTRONIKA 0951 1031 2691
 ELEKTA 0661 1521
 ELEKTRONIKA 0951 1031 2691
 ELIN 0981 1031 1521 1971 2701 2921
 ELITE 0011 0311 0771 1031 2441 4101 4221 4241 4341
 ELMAN 2161 3221 3711
 ELTA 1521 2191
 EMERSON 1661 2151 3221 4041 4101 4241 4261 4441 4581
 4601 4611 4621 4651 4661
 ENVISION 4461
 EON 0771 4101
 EPC 0361 0781 3191 4121
 ERRES 1031 4361
 ETRON 1521 2261
 EURO-FEEL 0661
 EUROMANN 0661 1031 2661 3861
 EUROPHON 0361 1031 2161 3221 3301 3851 3861 3891 3941
 EXPERT 2111 2131 2621 3581 3701
 EXPERT (F) 2131 3701
 EXPERT (I) 2621
 FENNER 1521
 FERGUSON 3181 3501 3511 3521 3601 3611 3621 3631 3711
 3751 3821 3901
 FIDELIS 1521
 FIDELITY 1981 2231
 FILSAI 1521
 FINLANDIA 0321 2491 3041 3511
 FINLUX 0811 1031 1521 1911 2521 2541 2551 2701 2921
 2931 2941 3011 3021 3031 3041 3071 3091 3101
 3151 3191 3221 3481 3841 3861 3991
 FIRST LINE 0521 1031 1521 1981 2161 3861 3941
 FISCHER 3341
 FISHER 0311 0341 1461 1981 2591 2681 2701 3211 3861
 3971 3991 4061 4091 4101 4581
 FLINT 1031
 FORMENTI 0851 0861 0891 1031 1111 2211 2441 2551 3891
 3991
 FORTRESS 1871 3991 4061 4101 4241
 FRABA 2681
 FRONTTECH 0661 1521 2061 2181 3861 3941 4251
 FUBA 3261
 FUJITSU 1661 2101 2151 2621 3161 3581 3861 4101 4241
 4261 4611 4731
 FUJITSU GENERAL 2101 2391 2621 3581 3861
 FUNAI 0521 0661 1521 1661 2151 4101 4241 4261 4611
 4621
 FUTURETECH 4621
 GALAXIS 0511 2671 2681 3151 3221
 GALAXY 2671 3151 3221
 GALERIA 1521
 GBC 1521 2031 2051 2161 3881
 GE 3511 4451 4471 4481 4551 4601 4641 4681 4711
 GEANT CASINO 2131
 GEBER 1981
 GEC 0171 1951 2001 2111 2461 3191 3861
 GELOSO 1521 2061 2161 3951 4221
 GEMSOUND 1521
 GENERAL 1521
 GENERAL TECHNIC 1521
 GENEXXA 1031 4221

GIBRALTER 4431 4441 4461
 GITEM 1031 2821 3511 3681
 GM 1521
 GMG 1521 3151
 GOLDHAND 1521
 GOLDI 1021
 GOLDSTAR 0171 0431 0461 0661 0771 0981 1031 1331 1521
 1911 2181 2581 2621 2681 2781 3161 3251 3681
 3861 4241 4371 4381 4441 4461 4511 4601
 GOODMAN 1491
 GOODMANS 0811 0981 1031 1501 1521 3321 3631 3861 4111
 GORENJE 2661 2681
 GPM 1521 4221
 GRADIENTE 4491 4511
 GRADIN 1031 1521 2441 4221
 GRAETZ 1951 1991 2061 2071 2091 2261 2491
 GRANADA 0161 0291 0371 1031 1611 1931 2001 2151 2341
 2361 2611 3081 3161 3511 3631 3861 4271
 GRANDIN 2111 2131 3701
 GREINADIER 1521
 GRUNDIG 1011 1581 1991 2151 2551 2611 2731 2741 2751
 2761 2771 2781 2791 2801 2811 2821 2831 2851
 2861 2871 2881 2891 2901
 GRUNPY 4611 4621
 GIT 1521 3151
 GUTTRONIC 1991
 GZE UNIMOR 2681
 HALIFAX 0661
 HALLMARK 1661 2151 2921 4101 4241 4261 4601
 HAMPTON 3861
 HANSEATIC 0521 0861 0891 1031 1521 1971 1981 2061 2441
 2591 2641 2821 3121
 HANTAREX 1031 1521 3881
 HARLEY DAVIDSON 0771 1661 2151 4101 4241 4261 4611
 HARMAN/KARDON 4501
 HARRAD 1661 2151 4101 4241 4261
 HARVARD 1661 2151 4101 4241 4261 4621
 HCM 0661 1521 2661 3861 4211 4221
 HEATHKIT 1031 1661
 HEMA 3861
 HEMMERMANN 1981
 HIFIVOX 3671 3681 4141
 HILINE 1521
 HINARI 0981 1031 1521 2261 4101 4111 4221
 HISAWA 4221
 HIT 4041
 HITACHI 1021 1031 1051 1211 2331 2401 3071 3541 0011
 0161 0171 0181 0191 0201 0211 0221 0231 0241
 0251 0261 0271 0281 0291 0341 0451 0471 0481
 0501 0981 1661 1921 1951 1961 2001 2061 2111
 2141 2151 2171 2461 2491 2591 2821 2921 3161
 3441 3671 3681 3861 4101 4241 4421 4511 4561
 HORIZONT 1031
 HORNYPHON 0971 1031
 HOSHAI 4221
 HUSPI ELEKTRONIK 3151
 HYGASHI 3861
 HYPER 0891 1521 3861 3891 4371
 HYPERVERSION 0801
 HYPSON 0661 1031 1521 3861
 IBERVISAO 1981 2161
 ICE 0661 1031 1521 3861 3891 4221
 IMA 1661 2151 4101 4241 4261

IMPERIAL 1031 1901 2021 2061 2161 2271 2551 2561 2671
 2681 3151 3941 3951 4331
 INDIANA 1031
 INFINITY 1031 4501
 INGELEN 0591 3241
 INGERSOLL 1521
 INNO HIT 1031 1521 2581 3851 3861
 INNOHIT 1031 1521 2581 3161 3861 4221
 INTEQ 4431
 INTERBUY 0651 0661 1521 3941
 INTERCORD 2591
 INTERDISCOUNT 1031 3511 3541 3681
 INTERFUNK 0811 0871 0901 0911 1031 1951 1971 1981 1991
 2001 2061 2081 2091 2111 2151 2261 2301 2671
 2681 3151 3681 3941 3981 3991 4001 4041 4301
 4321 4361
 INTERVISION 0551 0651 0661 2091 2191 2681 3221 3861 3941
 4221 4381
 IRRADIO 1031 1521 2521 2551 2581 2611 4221 4371
 ISKRA 3221
 IST 1031 3891 4221
 ISUKAI 1031 4221
 ITC 2161 3861
 ITL 1521
 ITS 1521 3861 4221
 ITT 0341 2051 2061 2151 2311
 JACSON 3191 3871
 JBL 1031 4501
 JCB 1661
 JEC 0011
 JETPOINT 0771 1031
 JINLIPI 1521
 JOCEL 0681 1241 1251 1391 1401 1411 1591
 JUMBOTRONIC 1031
 JVC 1031 1761 1771 1781 1791 1801 1811 1821 1831
 4101 4491
 KAIDO 2181
 KAISER 1031
 KAISUI 1031 1521 3861 4221
 KAMBROOK 3541
 KAMP 3861
 KAPPSCH 1951 1991 2001 2061 2151 2621 3581
 KARCHER 1031 1521 2661 3301
 KEC 4621
 KENDO 0541 0591 0981 1031 1521 2041 2061 2391 3121
 3221 3581
 KENNEDY 2391 2621 3581
 KENWOOD 4241 4441 4461
 KIOTA 1521
 KLH 1661 2151 3161 4101 4241 4261
 KLOSS 0771
 KNEISSEL 0001 2641
 KOBIC 1521
 KOLSTER 1031 3221
 KONICHI 1521
 KÖNIG 3661
 KONKA 4221
 KORPEL 1031
 KORTING 2441 2661 3961 3991 4001
 KÖRTING 3961 4001
 KTV 1661 2151 3861 4101 4241 4261 4461 4621
 KUASHO 1031 4241
 KUBA 2151 2591

KUBA ELECTRONIC 1981 2591
 LAMONT 3861
 LEADER 1521
 LEGEND 1521
 LENCO 0661 1031 1501 1521 1571 1971 3221
 LENOIR 1521 1981
 LESA 3941
 LEYCO 0521 0661 1031 3161
 LG 1331 4511
 LIESENKÖTTER 0911 1031 4301
 LIFE 1521
 LIFETEC 0661 1151 1521
 LINITRON 1871 4061 4101 4241
 LLOYD 1661 2151 4101 4241 4261
 LLOYD'S 1521 2001 2611
 LOEWE 0901 0911 0941 0991 1031 1171 3831 4011 4041
 LOEWE OPTA 0871 3831 3991
 LOGIK 4121 4421
 LÖGIK 1431 4121 4151
 LUMA 1031 1521 2051 2391 2621 3581
 LUX MAY 1031
 LUXMAN 4511
 LUXOR 1191 1211 1921 1961 1971 2001 2061 2081 2091
 2141 2151 2171 2201 2301 2401 2411 2451 2471
 2481 2491 2581 2931 2951 3011 3041 3071 3091
 3161
 LUXOR SALORA 3691
 LUXOR/SKANTIC 1971 2091 2401
 LXI 0021 0311 1031 1871 4471 4501 4581 4591 4601
 1521 1981 3071
 M ELECTRONIC
 M ELECTRONICS 1031 1521 2591 2701 2921 3041 3681 3711 3861
 4101 4241
 MACY'S 0891 1031 1521 1981 2031 3151 3221 3851 3921
 3931 3941 3951 3991 4041
 MAGNADYNE 0891 2551 3221 3301 3851
 MAGNAFON 0021 0311 0981 1031 1521 1871 4241
 MAGNASONIC 0171 0601 1031 4101 4461 4501 4611 4701
 MAGNAVOX 1351
 MAGNUM 4421
 MAJESTIC 0661
 MANDOR 0541 0661 1031 2441 3861
 MANESTH 0911 1021 1031 2591 4461 4501
 MARANTZ 4101
 MARCY'S 3991
 MARELLI 1031
 MARK 3941
 MASCOT 0061 0371 0401 0491 0531 0541 0631 0641 0761
 MATSUI 0981 1031 1521 1531 1551 1581 1901 1981 2001
 2161 2181 2781 3381 3861 3891 4121
 MATSUSHITA 4631
 MAVA 4241
 MAXAM 1521
 MAXELL 1521
 MAXWELL 3221
 MC MICHAEL 0171
 MCE 1521
 MEDIATOR 1031 4361
 MEDION 1331 1381
 MEGATRON 0161 4561 4601
 MELECTRONIC 2981 3111
 MEMOREX 0311 0661 1521 4261 4421 4511 4571 4581 4601
 4611 4631 4651
 MEMPHIS 1521 3161

MERCURY 1521
 MERRIT 2091
 METEOR 3301
 METZ 0691 0701 0711 2711 2721 2741 2751 2781 2821
 2831 2851 2881 3981 3991 4021 4041
 MGA 4261 4441 4461 4571 4601
 MIDLAND 4241 4431 4471 4481
 MINERVA 2551 2611 2741 2751 2781 2821 2851
 MINOKA 1031
 MINUTZ 4451
 MITSUBISHI 0871 0901 1031 1521 2741 3991 4041 4081 4091
 4101 4261 4271 4281 4411 4441 4551 4571
 MIVAR 2531 2571 2581 2631 2641 3231 3861 3881 3911
 MONITOR 0771
 MOTION 2551
 MOTOROLA 1031 1871 4551
 MTC 0771 0941 2151 2681 4241 4441 4461 4511 4521
 MULTIMEDIA 1561
 MULTISTANDARD 3221
 MULTITECH 1031 1521 1661 2061 2151 2181 2561 3221 3861
 3941 4101 4241 4261 4621
 MURPHY 2001 2701
 NAD 0021 4101 4591 4601
 NAMSUNC 1521
 NAO 0021
 NAOVIS 2051
 NAP 0941
 NATIONAL 1031 1601
 NEC 0301 0771 1521 4101 4441 4461 4511
 NECKERMANN 0811 0841 0851 0871 0891 0901 0911 0981 1031
 1521 1661 1701 1711 1781 2061 2151 2171 2331
 2391 2671 2681 2691 2781 2801 2821 2831 2851
 2881 3851 3861 3941 3991 4041 4301 4321
 NEI 1031 3371 4221
 NESCO 3931
 NEW WORLD 4221
 NEWTECH 1031 1521
 NIKKAI 0011 0661 1031 3161 4221 4241
 NIKKO 0981 3361 4461 4541 4601
 NISSAN 0771
 NOBLEX 1461 1521
 NOBLIKO 2521 2561 2611 3221 3891
 NOGAMATIC 3671 3681 4141
 NOKIA 2341 2401 2411 3071 3081 3091 4211 0311 0341
 0661 0751 0771 0891 1421 1521 1531 1921 1951
 1961 1971 1981 1991 2001 2051 2061 2071 2081
 2091 2111 2151 2201 2221 2261 2301 2481 2491
 2951 2961 2971 2991 3001 3051 3111 3151 3481
 NOKIA AKAI 2251
 NONAME 0761 0811 0891 0981 1031 1061 1151 1321 1331
 2181 2321 4161 4191
 NORDMENDE 1021 1101 1991 3441 3461 3511 3521 3531 3541
 3551 3601 3641 3671 3681 3711 3741 3991 4141
 NOVA 2701
 NOVABEAM 1031
 NOVATRONIC 1031 1521
 NTC 4541
 NUCLEONIC 2161
 O GENERAL 1521
 OCEANIC 0311 0521 1971 2001 2061 2091 2111 2131 2151
 2201 2401 2491 3071 3091 3701
 OKANO 1521 2681
 OLYMPIC 1521
 ONCEAS 1521

ONWA 3891 4221 4621
 OPERA 1031
 OPTANKA 1871
 OPTIMUS 4581 4631
 OPTONICA 4551
 ORAVA 0891 0921
 ORBIT 1031
 ORBITER 2681
 ORIENT 1521
 ORION 0491 0521 0531 0541 0611 0621 0631 0641 0851
 0871 0891 1031 1041 1151 1281 1291 1301 1311
 1521 1661 1981 2151 2371 2381 2441 3801 4101
 4121 4241
 4261 4611 4651
 OSAKI 3161 4221
 OSO 4221
 OSUME 3161 4061
 OTAKE 0541
 OTAVA 1061
 OTF 1521
 OTTO VERSAND 1031 1871 3711 4181 0341 0521 0541 0811 0871
 0901 0911 0981 1521 1661 1671 1691 1701 1711
 1721 1911 1981 2061 2091 2151 2171 2181 2191
 2441 2591 2661 2741 2751 2801 2811 2821 2831
 2881 3681 3861 3941 4101 4371 4391
 OTTO-VERSAND 0041 0051 0811 0851 0891 1031 1121 1521 1711
 1741 1841 1871 1981 2091 2161 2191 2741 2781
 2801 2821 2851 3251 3511 3711 3801 4181 4211
 OVP 0961 1141
 PACIFIC 1251 1261
 PAEL 2521 2611
 PALLADIUM 0871 1031 2061 2681 2751 2821 2831 3861 3991
 PANAMA 0661 1521 3861 3941
 PANASHIBA 1521
 PANASONIC 1031 1601 1611 1621 1631 1641 1991 2001 2061
 2711 2821 4171 4181 4481 4631
 PANAVOX 1521
 PANORAMA 1521
 PANORAMIC 3681
 PATHE CINEMA 2161 2441 2641
 PATHE MARCONI 3671 3681 4141
 PAUSA 1521
 PCE/PEC 0011 0021 0311 0341 0771 4101 4241 4261
 PENNEY 0011 0771 2591 4241 4441 4451 4461 4471 4481
 4511 4521 4591 4601 4711
 PERFECT 1031
 PERFORMANCE 1661 4101 4121
 PERSHIN 2611
 PHILCO 0171 1031 1521 2021 2031 2161 2551 2561 2671
 3151 3941 3951 3991 4041 4101 4331 4441 4461
 4501 4561 4651
 PHILHARMONIC 3861
 PHILIPS 0171 0811 0821 0841 0871 0891 0911 0931 0981
 1001 1011 1021 1031 1061 1121 1131 1161 1421
 1661 2521 2621 2821 2831 3161 3441 3541 3991
 4101 4361 4401 4411 4501
 PHILIPS (F) 0911 1031 4361
 PHOENIX 0851 0891 1031 2441 3991
 PHONOLA 1031 3991 4361
 PILOT 0771 4441 4461
 PIONEER 0441 1031 1971 2121 3441 3541 3681
 PLANTRON 0661 1031 1521
 POLICOM 3221 3681
 POPPY 1521

PORTLAND 0891 1661 4241 4441 4541
 PRANDINO PRINCE 2051 2061 2521 2551 3221 3851 3941
 PRECISION 3861
 PRIMA 0011 0311 0771 1031 1521 4101 4241
 PRINCESS 1521
 PRINZ 2591 3161
 PRISM 4481
 PROELCO 1031 2661
 PROFEX 1521 1971 2181 2191 2561
 PROFITRONIC 0981 1031 3221
 PROLINE 3121
 PROSCAN 0771 4471
 PROTEC 0661 1031 1521 2061 3221 3861 3941
 PROTON 1521 4241 4601
 PRO-VISION 0981
 PULSAR 4431 4441
 PULSER 0171 0771 1031 1521 3161 3681 4241
 PYE 1031
 PVM1 1521
 QTY1 0891 2321 2461
 QUASAR 3221 3941 4481 4631
 QUELLE 0041 0051 0341 0491 0521 0541 0811 0841 0851
 0871 0891 0901 0911 0941 0981 1031 1151 1171
 1521 1661 1671 1691 1701 1711 1721 1741 1781
 1911 1981 2061 2091 2111 2161 2181 2271 2391
 2401 2521 2541 2551 2581 2611 2621 2691 2701
 2741 2751 2781 2811 2821 2831 2851 2881 2931
 2941 3021 3041 3091 3291 3311 3511 3581 3681
 3861 4061 4091 4101 4121 4181 4241 4301 4311
 4321 4331 4341 4351 4371
 QUESTA 4101
 QUIERO 0571
 R LINE 1031
 RADIALVA 3681
 RADIO SHACK 0311 1871 4241 4441 4461 4471 4511 4581 4601
 4621
 RADIOLA 0911 1031 4361
 RADIOMARELLI 3851 3931 3941 3991
 RADIONETTE 2001 2111
 RADIOTONE 0661 0981 1031 1521
 RADIX 0351
 RANK 2551
 RANK/BUSH/MURPHY 2001 2601
 RCA 0771 4441 4471 4481 4531 4551 4671 4681 4691
 4711 4721
 REALISTIC 0311 4441 4461 4511 4581 4601 4621
 RECOR 0891
 RECORD 0891 1031 1441 2661
 REDIFFUSION 1971 2001
 REGENTE 1521
 REVEX 0941 1031 2551
 REVEX/STUDER 1031
 REX 2041 2061 2101 2391 2621 2641 3581 3951
 RFT 2091 2641 2651 2661 3211 3991 4041
 RHAPSODY 3861
 RICE CLUB 0771
 RMB 4241
 RM-U301 1681
 ROADSTAR 0661 1151 1521 4221
 ROSITA 1521
 ROSNER 3861
 ROTEL 4731
 ROWA 1521

ROYAL 1521
 ROYAL LUX 0671 2661
 RUNCO 0771 4431 4461
 SABA 1951 2001 2061 2151 2261 2501 3221 3441 3451
 3461 3511 3521 3541 3671 3681 3711 3721 3731
 3831 3851 3991 4131 4141
 SAGEM 0591
 SAISHO 0491 0541 1031 3861 4121
 SAKIO 0661 1531
 SAKURA 1521
 SALORA 0311 1921 1931 1971 2061 2081 2091 2151 2171
 2201 2331 2401 2411 2481 2491 2581 2961 3041
 3061 3071 3091 3111 3161 3481
 SAMBERS 2521 2551 2561 2581 2611 3221 3301 3831 3851
 SAMPO 4241 4461
 SAMSUNG 0661 0771 0981 1011 1031 1341 1361 1461 1521
 2581 2681 3161 3291 3861 4241 4251 4441 4461
 4511 4521 4601
 SAMSUX 4241
 SANKY 4241
 SANSUI 0771 1031 1521 4121 4241 4641 4651
 SANY 3541
 SANYO 0061 0311 0321 0331 0341 0361 0371 0381 0391
 0401 0411 0421 1521 1981 2641 2681 2701 3161
 3191 3311 3341 4061 4091 4101 4121 4581
 SASO 3681
 SATTELITE 2951
 SBR 1031 4361
 SCHAUH LORENZ 2061 2401 2491
 SCHNEIDER 0661 0721 0751 0891 0981 1021 1031 1071 1091
 1341 1351 1521 1981 2111 2261 2351 2391 2591
 2621 2641 3861 4221 4361 4371 4391
 SCHNEIDER (F) 0911 4361
 SCIMITSU 4441
 SCOTCH 4601
 SCOTT 1661 2151 4101 4241 4261 4441 4601 4611 4621
 SEARS 0021 0311 4471 4501 4511 4581 4591 4601 4611
 SEG 0661 1151 1521 1741 2161 2561 3211 3221 3861
 3941 4101 4221 4241
 SEI 0521 0871 1661 1981 3221 3991
 SEI-SINUDYNE 0491 0851 0871 1021 1031 1101 1981 2031 4041
 SELECO 0811 2011 2041 2051 2101 2391 2431 2621 2641
 3121 3141 3411 3511 3561 3571 3581 3691 4091
 SEMIVOX 4621
 SEMP 4591
 SEMUA 4241
 SENCORA 1521
 SENTRA 0011 2261 4221
 SHARP 1841 1851 1861 1871 1881 1891 4061 4091 4101
 4241 4551
 SHINTOM 0981 1661
 SHINTOSHI 0981
 SHIVAKI 0981 1031 1441
 SHOGUN 4441
 SHORAI 0521
 SHOW 1521
 SIAREM 2031 3221 3831 3881 3991 4041
 SICATEL 2671 3131
 SICATEL-FRANCE-S 3131
 SICE 2741 2751
 SIEMENS 0971 1031 2741 2751 2781 2791 2801 2811 2821
 2831 2841 2851 2881 4061 4071 4241 4301 4311
 4321 4341
 SIERRA 1031 4361

SIESTA 2661 2681
 SIGMAX 0771
 SIGNATURE 0011 1661 4421
 SILMA 1031
 SILVA 1521
 SILVER 4101 4221
 SINGER 1031 1521 2351 3221 3701 3921 3951 3991 4041
 SINODYNE 1021 1081
 SINOTEC 0981
 SINUDYNE 0521 0541 0851 0891 1031 1741 1981 2051 2061
 2351 2391 3221 3801 3991

 SKANTIC 2061
 SMARAGD 1581
 SMYDER 1031
 SOGERA 2441
 SOLAVOX 2111 2261
 SONITRON 0341 2681
 SONOKO 0661 1031 1521 3861
 SONOLOR 2001 2131 2201 2401 3701
 SONTEC 1031 2681
 SONY 1651 1661 1671 1681 1691 1701 1711 1721 1741
 1751 4091 4101 4121

 SOUND & VISION 3221 4221
 SOUNDESIGN 0771 1661 2151 4101 4241 4261 4601 4611 4621
 SOUNDMASTER 1521
 SPECTRA 1501
 SPECTRICIAN 1031 4241
 SR2000 0021 0311
 SSS 4441 4621
 STANDARD 1521 2441 3861 4221
 STARLITE 1521
 STARLUX 1521
 STARTLITE 4621
 STERN 2041 2061 2101 2391 2621 2641 3581
 SUNKAI 0521 0541 4221
 SUNRISE 1451
 SUNSTAR 1521
 SUNWOOD 1031 1521
 SUPERTEC 0891 1521
 SUPERTECH 1521 1981 2271
 SUPRA 1521
 SUPREMACY 4101 4241
 SUPREME 1661
 SUTRON 1521
 SYC LINE 1521
 SYDNEY 3861
 SYLVANIA 1031 4061 4461 4501
 SYMPHONIC 1661 2151 4101 4241 4261 4621
 TADISTAR 0981
 TALENT 2741
 TANDBERG 2391 2711 3681
 TANDY 1871 3161 3861 3941 4221 4551
 TASHIKO 0171 2181 3861 4101 4111
 TATUNG 0501 1021 1031 1201 1211 1371 3161 3861 4121
 TEAK 1521 1981
 TEC 1501 1521 2101 2161 2271 2391 2621 3371 3861
 3941 4381

 TECHLINE 3221
 TECHNEMA 2441
 TECHNICS 1031 1601 4481 4631
 TECHNILAND 1031
 TECHNISAT 0811 3421

TECHNOL 1521
 TECHNOL ACE 4611
 TECHWOOD 0771 1661 4481 4511
 TECHNIMAGEN 1021 1181
 TECNISON 0981 1521
 TEDELEX 1521
 TEKNANT 1031 1521
 TEKNIKA 0771 4241 4261 4421 4441 4501 4511 4521 4541
 4571 4611 4621
 0771 1521

 TEKON 3671 3681 3811 4141
 TELEAVIA 0831
 TELECO 1521
 TELEFAC 3351 3511 3521 3541 3591 3631 3641 3651 3681
 3711 3731 3781 3941 4261 4291 4331 4351 4511

 TELEKOM 2421
 TELEMESTER 2441
 TELEOPTA 1521 1531
 TELERENT 0941
 TELESERVICE 2741
 TELESTAR 1521
 TELETECH 1521 3941
 TELETON 2061 2101 2151 2621 3581 3861
 TELEVIDEON 2441
 TELEVISIO 3701
 TELIVA 3681
 TEMPEST 1521
 TENSAT 0521 0981 1031 1521 1911 2441 2701 2921 3221
 3251 3861 3891 4221

 TENSON 1521
 TESLA 0831 1031
 TESLA ORAVA 1031
 TEXET 3861
 THOMAS 0171 0771 1031 1521 1661 3161 3681 4241
 THOMSON 2151 2611 3351 3441 3451 3461 3491 3511 3521
 3541 3631 3671 3681 3711 3761 3791 3811 4131
 4141

 THORN 0011 0061 0171 0221 0331 0341 0361 0731 0741
 0901 0911 1031 1431 1661 2081 2091 2111 2261
 2331 2461 2521 2611 2701 2741 3181 3191 3511
 3651 3681
 3821 3901 4091 4101 4121 4151 4271 4361

 THORN-FERGUSON 1031 1431 1971 1981 2001 2111 2391 2611 2741
 2821 3181 3511 3541 3681 3711 3821 3901 4151

 TMK 0771 4511 4601
 TNCI 4431
 TOBO 1521
 TOKAI 1021 1031 3161
 TOKYO 0771 1451
 TOSHIBA 0011 0021 0031 0041 0051 0061 0071 0081 0091
 0101 0111 0131 0141 0311 0341 0731 0771 2551
 2601 4101 4521 4581 4591
 0771 4241

 TOSONIC 4241
 TOTEVISION 2061 2161 3221
 TOWADA 1331 1541 4211
 TRC 1521
 TREVI 1031
 TRIAD 3861
 TRIDENT 0811 1031 2661
 TRILUX 4221
 TRISTAR 0491 2551
 TRIUMPH 1521
 TRIVISION

UHER 0941 1031 1731 2441 2551 2591 2621 3221 3581
 ULTRA 3161
 ULTRAFOX 3951
 ULTRAVOX 2031 3221 3891 3921 3941 3951 3991 4041
 UMA 1031 1981 2001 2091 2111 2611 2741 3541 3681
 4311 4331 4341
 UNIC RADIO 1971
 UNIMOR 1031 2661
 UNITED 0631 1181
 UNIVERSUM 0661 0951 1031 1521 1971 1981 2611 2661 2681
 2701 2741 2821 2831 2921 2981 3041 3111 3321
 3581 3941 4301 4331
 UNIVOX 2111 4041
 URANYA 1521 3221
 VANGUARD 1521
 VECO 1521
 VECTOR RESEARCH 4461
 VECTOR/VICTOR 1761
 VESTEL 0891 1021 1031 1151 1221 1231 3321
 VEXA 1031 1521
 VICTOR 4491
 VIDEO SYSTEM 1031
 VIDEOLOGUE 3861 4221
 VIDEOPLUS 0581
 VIDEOSAT 3941
 VIDEOTON 1921 1941 2371 3151 3441 3541 3771 3811
 VIDIKRON 4501
 VIDION 1521
 VIDTECH 4441 4601
 VISION 1521 2441
 VISON 1031 2441
 VORTEC 1031
 VOXSON 1031 2051 2551 3991 4041
 VTQ 3211
 WALKIE 2621
 WALTHAM 1921 2061 2371 2511 3811 3861
 WARDS 1031 1761 4421 4441 4451 4461 4501 4511 4601
 4611
 WATSON 0891 1031 1521 2441 4221 4341
 WATT RADIO 1981 2031 3151 3221 3301 3891
 WEGA 3971 3991 4101
 WEGAVOX 1031 1521 3151 3941
 WELTBlick 1031
 WHITE WESTINGHOUSE 0311 1031 2441 3151 3221 3891 4651 4661
 WINSTON 1031 1521
 WINTERNITZ 1521
 WIZJA 1021
 WORLD-TECH 1501
 WORLDVIEW 1031 1521
 YAMAHA 4441 4461
 YOKO 0661 0891 1031 1501 1521 2161 2181 2691 3681
 3861 3951 4221
 YORK 0341 1031
 YORX 4221
 ZANUSSI 2051 3581
 ZENITH 1031 1661 4421 4431 4541 4651 4661

VCR

ADMIRAL 1402 1482
 ADVENTURA 1312
 AIWA 0042 0352 0432 1312 1332
 AKAI 0042 0422 0492 0582 0612 0642 0652 0762 0812
 0912 1352
 ALBA 0002 0112 0282 0332 0342 0972
 AMERICA HIGH 1322
 AMSTRAD 0322 0432 0452
 ANITECH 0002
 ANITSCHE 1002
 ASA 0012 0052
 ASHA 1502
 AUDIOSONIC 0002
 AUDIOVOX 1332
 BAIRD 0042 0282 0492
 BANG & OLUFSEN 0042
 BAUR 0052 0062 0812
 BEAUMARK 1502
 BELL & HOWELL 1442
 BLACK DIAMOND 0922 0972
 BLAUPUNKT 0062 0092 0252 0462 0672 0992
 BRIONVEGA 0032
 BROKSONIC 1452 1472 1482
 BUSH 0002 0282 0332 0342 0512 0972
 BUSH (UK) 0812
 CALIX 1332
 CANON 1322
 CAPEHART 0112
 CARVER 1432
 CGE 0042 0432 0762
 CITIZEN 1332
 CRAIG 0072 0482 1332 1392 1502
 CROWN 0112 0282 0622
 CURTIS MATHES 1322 1352 1412 1462
 CYBERNEX 1502
 DAEWOOD 0112 0282 0622 1382
 DANSAL 0012
 DAYTRON 0112
 DECCA 0042 0052 0432 0942
 DECCA (UK) 0052
 DEGRAAF 0052 0132 0432 0532 0602
 DENON 1362
 DIXI 0442
 DUAL 0042 0632
 DUMONT 0052 0432 0532
 DYNATECH 0432 1312
 DYNATRON 0012
 ELBE 0122
 ELECTROHOME 1332
 ELECTROPHONIC 1332
 ELIN 0072
 EMERSON 0012 0162 0202 0432 0512 0522 1312 1332 1372
 1452 1472 1482
 ERRES 0012
 FERGUSON 0042 0712 0722 0852 0902 1012 1022 1082
 FIDELITY 0432
 FINLANDIA 0052 0532
 FINLUX 0012 0042 0052 0082 0262 0382 0432 0462 0492
 0532 0572 0602 0912

FIRST LINE 0002 0912
 FISHER 0162 0482 0532 0542 0572 0592 1392 1442
 FORMENTI-PHOENIX 0012 0052
 FRONTTECH 0112
 FUJII 1322
 FUNAI 0432 1312
 GARRARD 1312
 GBC 0002
 GE 1322 1402 1412 1502
 GEC (UK) 0022 0052
 GELOSO 0002
 GENERAL TECHNIC 1172
 GO VIDEO 1512 1522 1572
 GOLDSTAR 0012 0122 0812 0952 1332
 GOODMANS 0002 0072 0282 0432 0502
 GOODMANS (UK) 0002
 GRADIENTE 1312
 GRAETZ 0022 0042
 GRANADA 0052 0132 0532 0572
 GRANADA (UK) 0052 0092 0462 0602 0812 0822
 GRUNDIG 0052 0062 0092 0232 0252 0262 0752 0802 1242
 1252 1262 1272 1282 1292 1302
 HANSEATIC 0052 0812
 HARLEY DAVIDSON 1312
 HARMAN/KARDON 0122 0922 1432
 HCM 0002
 HINARI 0002 0202 0412 0442 0522
 HI-Q 1392
 HITACHI 0042 0172 0292 0432 0602 0662 0812 1022 1312
 1352 1362
 HUGHES NETWORK SYSTEM 1362
 IMPERIAL 0072 0432
 INGERSOL 0442
 INNO HIT 0002 0052 0072
 INNOVATION 1142 1162 1172
 INTERFUNK 0022 0052
 IRRADIO 0002 0012
 ITT 0022 0032 0042 0072 0292 0492 0532 0572 0762
 ITT-NOKIA 0022 0032 0042 0072 0292 0492 0532 0572 0762
 JENSEN 0042 1352
 JVC 0042 0102 0142 0272 0742 0762 0782 0902 1352
 1422
 KARCHER 0052 0072 0812
 KEC 1332
 KENDO 0492
 KENWOOD 0042 0142 0572 1352 1422
 KODAK 1322 1332
 LIFETEC 1142 1162 1172
 LLOYD 0432
 LLOYD'S 1312
 LOEWE OPTA 0052 0092 0152
 LOGIK 0002 0072 0442
 LUMA 0162
 LUXOR 0492 0572 0812
 LXI 1332
 M ELECTRONIC 0432
 MAGNADYNE 0052
 MAGNASONIC 0572
 MAGNAVOX 1312 1322 1342 1432
 MAGNIN 1502
 MANESTH 0012

MARANTZ 0012 0052 0092 0122 0502 1322 1432
 MARK 0012
 MARTA 0012 1332
 MATSUI 0012 0032 0042 0052 0062 0442 0512 0522 0812
 0972 1202 1212 1222 1232
 1322 1462
 MATSUSHITA 1142 1162 1172
 MEDION 1322
 MEI 0012 0132 0432 0482 0532 0572 1312 1322 1332
 1342 1392 1402 1442 1462 1482 1502 1592 1632
 1652
 MEMOREX 0062 0092 0932
 0912 1372 1502
 METZ 1502
 MGA 1142 1162 1172
 MGN TECHNOLOGY 0062 0092 0252
 MICROMAXX 0172 0602 1362
 MINERVA 0052 0062 0142 0912 0922 0972 1372 1402 1422
 MINOLTA 1322 1402
 MITSUBISHI 0072 0432 1312 1502
 MOTOROLA 0002 0052 0062 0282 0432 1312
 MTC 0432
 MULTITECH 0012 0052
 MURPHY 0462
 N.E.I. 0042 0122 0142 1352 1422 1442
 NATIONAL 0032 0042 0052 0072 0092 0202 0522 0572 0762
 0812
 NEC 0112
 NECKERMANN 1332
 1502
 NIKKAI 0092
 NIKKO 0022 0032 0042 0072 0292 0492 0532 0572 0762
 1152
 NOBLEX 0042 0102 0142 0192 0222 0242 0392 0402 0632
 0732 0742 0762 0782 0792 0832 0842 0872
 NOBLIKO 0462 1322
 NOKIA 1332 1402 1442 1462 1512 1602 1612 1632 1652
 0132 0502
 NORDMENDE 0162 0202 0312 0442 0512 0522 0982 1472 1482
 0432
 OLYMPUS 0002 0012 0432
 OPTIMUS 0052 0062 0812
 OPTIONICA 0172 0602
 ORION 0022 0212 0462 0672 0992 1092 1102 1182 1322
 1462 1492 1542 1612 1632 1652 1662
 OSAKA 1322 1332 1362 1502
 OSAKI 1362
 OTTO VERSAND 0432
 PAENTAX 1062 1322 1482
 PANASONIC 0052 0082 0092 0152 0182 0362 0372 0382 0472
 0502 1072 1322 1432 1552 1622 1642
 0052 0152
 PHONOLA 0012 1332
 PILOT 0052 0142 0372 0472 1422
 PIONEER 1432
 POLK AUDIO 0112
 PORTLAND 1502
 PROFITRONIC 0432
 PROLINE 1412
 PROSCAN 1342
 PULSAR 0052 0152
 PYE 0572
 QUARTZ

QUASAR 1322 1462 1632
 QUELLE 0012 0032 0042 0052 0062 0072 0092 0202 0462
 0522 0942
 RADIO SHACK 1312 1592
 RADIONETTE 0022
 RADIX 1332
 RANDEX 1332
 RCA 1322 1362 1402 1412 1412 1502
 REALISTIC 0012 0072 0132 0432 0482 0502 0532 0572 1312
 1322 1332 1392 1402 1442
 REPLAY TV 1532 1542
 RET 1072
 REX 0042 0742 0782
 RICOH 0952
 RUNCO 1342
 SABA 0042 0142 0192 0222 0242 0392 0632 0732 0742
 0762 0772 0782 0792 0872
 SAISHO 0162 0202 0292 0442 0512 0522 0972
 SALORA 0192 0572 0812 0822 0912
 SAMSUNG 0052 0072 0622 0652 1192 1382 1502
 SAMTRON 1572
 SANKY 1342 1402
 SANSUI 0042 0142 1312 1352 1422 1482
 SANYO 0482 0532 0562 0572 1392 1442 1502
 SBR 0052 0152 0182
 SCHAUB LORENZ 0022 0042
 SCHNEIDER 0002 0012 0052 0072 0432
 SCOTT 1372 1382 1452 1472
 SEARS 1312 1322 1332 1362 1392 1442
 SEG 0002 0072
 SEI-SINUDYNE 0442
 SELECO 0042
 SEMP 1382
 SENTRA 0112
 SHARP 0132 0502 0702 1402
 SHINTOM 0002
 SHOGUN 1502
 SIEMENS 0062 0092 0252 0572
 SINUDYNE 0052 0382 0442 0932
 SONITRON 0532 0572
 SONOKO 0282
 SONY 0432 0552 0682 0692 0942 0952 0962 1122 1132
 1312 1322 1562 1582
 STS 0602 1362
 SUNKAI 0512
 SUNSTAR 0432
 SYLVANIA 0432 0912 1312 1322 1372 1432
 SYMPHONIC 0432 0912 1312
 TANDBERG 0062 0162 0522 0932
 TASHIKO 0132 0432
 TÄTUNG 0042 0052 0432 0922 1352
 TCM 1142 1162 1172
 TEAC 0042 0432 1312 1352
 TECHNICS 0462 1322 1462
 TEKNIKA 0012 0432 1312 1322 1332
 TELEFUNKEN 0042 0192 0632 0732 0742 0762 0782 0882 0892
 TEMPEST 1032 1042 1052
 TENOSAL 0002
 THOMAS 1312
 THOMSON 0042 0102 0142 0192 0402 0632 0762
 THORN 0042 0902

THORN-FERGUSON 0042 0222 0302 0712 0722 0742 0762 0852 0862
 0872 0902
 TIVO 1552 1562
 TMK 0522 1502
 TONSAI 0002
 TOSHIBA 0042 0622 0912 1372 1382
 TOTEVISION 0012 0072 1332 1502
 TRIUMPH 0922
 UHER 0042 0072
 ULTRAVOX 0032
 UNITECH 0072 1502
 VECTOR 1382
 VECTOR RESEARCH 0122
 VICTOR 0042 0102 0142
 VIDEO CONCEPTS 1382
 VIDEON 1162 1172
 VIDEOSONIC 1502
 WARDS 1312 1322 1362 1392 1402 1412 1432 1502
 WELTBlick 0012
 WHITE WESTINGHOUSE 0032 1482
 XENON 0162
 XR-1000 1312 1322
 YAMAHA 0042 0122
 YOKO 0012 0062 0072
 ZENITH 1312 1342 1482

SAT

AKAI 1273
 ALBA 0823 1273
 ALPHASTAR 2643
 AMPLICA 3223
 AMSTRAD 0163 0793 1013 1023 1293 1583 1593
 AST 0403
 ASTRO 1673
 AUSTAR 1473 1733
 AVANDIS 2013
 BELL EXPRESSVU 3283 3293 3323
 BLAUPUNKT 0963
 BMC SATELLITE 0103
 BRITISH TELECOM 1273
 BT 1303 1643
 BUSH 0823
 CAMBRIDGE 0193 1273
 CANAL+ 1363
 CHANNEL MASTER 2753 2783 3513
 CHAPARRAL 0013 0693 1003 3033 3343
 CHEYENNE 3343
 COLUMBUS 0613
 COMCAST 3563
 CONNEXIONS 0303 0423
 D-BOX 1163 1913
 DISCUS ELIPSE 0853 0863
 DISH NETWORK 2793 3273 3283 3293 3303 3323 3493 3503
 DISKXPRESS 0423
 DRAKE 0003 2763 2873 2913
 DX ANTENNA 2773 2893
 ECHOSPHERE 3293
 ECHOSTAR 0223 0233 0603 0623 0663 0923 0993 1043 1053
 1063 1103 2653 2793 3283 3293 3323 3493 3503
 ELTA 1283

ELTA SAT 0143
 EURODEC 1223 1233 1243
 EUROSTAR 0993
 EXPRESSVU 2653
 FERGUSON 0183 0843
 FINLUX 0973
 FORCE 2103 2133
 FOXTEL 0063 1463 1493 1753 1823 2563
 FRACARRO 0023 0533 0773
 FUBA 0613 0633 1053
 FUJITSU 2843 3483
 GE 2603 3403 3443
 GEMINI 2733
 GENERAL INSTRUMENT 2693
 GENERAL INSTRUMENTS 2703 2933 2963 3093 3163 3173 3193 3203 3213
 GIUCAR RECORD 0203 0333
 GRUNDIG 0943 0963 1683 1693 1703
 HIGH PERFORMANCE 0913
 HIRSCHMANN 0753 0963 1403 1413 1423 1433 1443
 HITACHI 0513 0703 0943
 HITACHI DSS 2863 2903
 HTS 2653
 HUGHES NETWORKS SYSTEM 2633
 HUGHES SATELLITE DSS 2813 2903 3013 3053 3123
 HUMAX 2063
 ICX INTERNATIONAL 0883
 JEEMON 0143
 JERROLD 0843 0983 3473
 JOHANSSON 0243
 JVC 1273 2653 3303
 KATHREIN 0113 0263 0273 0363 1393
 KENWOOD 2803
 KOSMOS 0263
 KYOSTAR 1033 1083
 LENG 0243
 LIFESAT 1323 1343 1353
 LUXOR 0133 0463 0503 3523
 MACAB 0353 1943
 MACOM STATE 2823
 MAGNAVOX 2613 2623
 MAGNAVOX DSS 3023 3313 3393
 MASPRO 0013 0113 0253
 MEDION 1323 1343
 MEMOREX 2623
 METRONIC 1973 1983 1993 2003 2023 2033 2043
 METZ 0963
 MICROMAXX 1323 1343
 MITSUBISHI 0963 2633
 MORGANS 0593
 MULTICHOICE 0123 1743
 MURATTO 0403
 NEC 0283 0313 0763 0783 0833
 NEXT LEVEL 2693
 NIKKO 1133 1143
 NOKIA 1153 1813 1893 1903 1923 1953 2143 2163 2173
 2553
 NORSAT 0783
 NORSTAT 2853
 ONDIGITAL 1523 1863 1873 2373 2383 2403 2413 2553
 OTTO VERSAND 0963
 OURALIS 2053

PACE 0933 1523 1573 1623 1633 1793 1803 1813 1883
 2403 2943 2983 3153
 PACE MSS 0943
 PALCOM 0613 0683 0703
 PALSAT 0393
 PALTEC 0703
 PANASONIC 0803 1463
 PANASONIC DSS 3133 3143
 PANSAT 1073
 PHILIPS 0953 1123 1183 1193 1203 1533 1763 1773 1783
 1813 1853 1863 1873 2373 2383 2613 2623 2633
 3023 3313 3393
 PHILIPS/MAGNAVOX 3023 3313 3393
 PIONEER 2713
 PRIMESTAR 3183 3213
 PROSAT 1173
 PROSCAN 2593 3403 3443 3553
 PTT TELECOM 0303 0893
 QUELLE 0963
 RADIO SHACK 2693
 RADIX 1053
 RCA 2583 2593 2603 2673 3553
 RCA DSS 3403 3413 3423 3433 3453 3463
 REALISTIC 3233 3333
 REDIFFUSION 0313 0783
 SAGEM 1253 1933 2123 2423
 SAKURA 0563 0813
 SALORA 0133 0453 0483 0493 0573
 SAMSUNG 0743 0753 1563 2113
 SAMSUNG DSS 2923 2973 3103
 SAT 0403
 SATCOM 0893
 SATECO 0643
 SATELLITE 1543
 SCIENTIFIC ATLANTA 3533 3543
 SECTOR 1263
 SEDEA 1093
 SENTRA 0413
 SHARP 3113
 SIEMENS 0893 0963
 SIERRA I II III 3343
 SINTRACK 0903
 SKY (SKY Digital) 1453 2573
 SKY SATELLITE 2393 2453 2533 2543
 SKYMASTER 2353 2363 2463 2473 2503 2513
 SKYSCAN 0873
 SONY 0733 0943 3033
 SONY DSS 3243 3253 3263
 STAR CHOICE 2693 3173 3183 3213
 STAR SIGHT 3123
 STAR TRAK 2993
 STELLA 0303
 STREAM 0043
 STRONG 0153 0393 1033 1083 2183 2193 2203 2213 2223
 2233 2243 2253 2263 2273 2283 2293 2303 2313
 2323 2333 2343
 STS 2773 2833 3043
 STV 0633
 SUN/MOON/STAR 1473
 SUPER GUIDE 3003
 TANDBERG 1113

TANDY 0913
TANTEC 0613
TATUNG 0513 0543
TECHNISAT 0083 0093 0523 0553 1053
TELE+ 1843
TELECOM 0303
TELEMAX 0583
TELEVES 0173 0293 0443 0473 1313 1483 1503 1513 1553
1653 1663 1713 1723 1833 2073 2083 2433 2443
2493 2483 2523

THOMSON 2153 3153
THORN-FERGUSON 0073 0183
TOSHIBA 0943 2413 2633 2663 2883
TOSHIBA DSS 2723 2743 3063
TPS 1373 2443
TRIAD 0403 2153
UNIDEN 0033 0213 0673 0713 0723 2613 2623 3083 3353
UNIDEN DSS 3123
US ELECTRONICS 0883
VIDEO CIPHER II 2913
VORTEC 0753 1033 1073
VTECH 0433
WINERSAT 0243
WISI 0053 0353 0373 0383 0403 0653 1053
WOLSEY 0913
WORLDSAT 1603 1613
XSAT 1383 1963
ZEHNDER 0263 0323 0343 0403 1213 1333
ZENDER 0403
ZENITH 2683 2733 2763 2873 2913 2943 2953 2983 3073
3363 3373 3383
ZINWEL 2093

CTV

ABC 0434 0444 0464 0834 0904 1034 1044 1054 1234
0774
ADELPHIA
ALLEGRO 0504 0634 0754
AMERICAST 0594 0724
AMINO 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
ANTRONIX 0994 1144
ARCHER 0554 0954 0994 1004 1144
AT&T 0864
AUSTAR 0194
BELL SOUTH 0594
CABLETENNA 1144
CABLETIME 0084 0094 0114
CABLEVIEW 1144
CENTURY 1004
CITIZEN 0504 1004
CLYDE CABLEVISION 0064
COLOUR VOICE 0674 0684
COMTRONICS 0614 0984
CONTEC/CONY 1104
CYTA 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
EASTERN 1254
EMERSON 0554
EDNA EU 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
EVERQUEST 0454
FILMNET 0034 0074
FOCUS 0514
FOXTEL 0154 0164 0174
FRANCE TELECOM 0024
G.I. 0194 0214
GARRARD 1004
GC ELECTRONICS 0994
GE 0654
GEC 0064
GEMINI 0454 0554 0884 0934 1174
GENERAL INSTRUMENT 0444 0494 0524 0564 0744 0854 0864 1024 1054
1064 1074 1224 1244 1354
GOODMIND 0554
HAMLIN 1194 1204 1264
HITACHI 0444 1054
HK BROADBAND 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
HK CABLE 0204 0254
HYTEK 1234
INTERCOM TV 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
JASCO 0454 0504 1004
JERROLD 0054 0434 0444 0454 0494 0524 0564 0854 0864
0904 0914 0924 0934 1034 1044 1054 1064 1074
1184
0474 1014
MAGNAVOX 0424 1284
MEMOREX
MOTOROLA 0604 0744 0854 0864 0904 0914 0924 0934 1024
1034 1064 1074 1044 1054 1224 1244 1184 1354
MOVIE TIME 0104 1084 1234
NEC 0264 0274 0284 0294 0304 0314 0324 0334 0344
0354 0364 0374 0384 0394 0404 0414
NOW BROADBAND TV 0244

NSC	0104 1084 1234
OAK	0644 1104 1234
OPTUSVISION	0184
PACE	0484
PANASONIC	0424 0814 0844
PARAGON	0424 1284
PHILIPS	0024 0474 0674 0684 0944 0964 0974 1004 1014 1174
PHILIPS/MAGNAVOX	0694 0704
PIONEER	0574 0624 0804 0894
POPULAR MECHANICS	0514
PULSAR	0424 1284
QUASAR	0424
RADIO SHACK	0454 0504 0554 0584 0694 0704 0754
RCA	0844 1134
REALISTIC	0994
RECOTON	0514
REGAL	1204
REGENCY	1254
REMBRANDT	0444 1054
RUNCO	0424 1284
SAMSUNG	0134 0614 0624
SCIENTIFIC ATLANTA	0124 0144 0464 0534 0574 0764 0774 0784 0794 0804 0824 0834 1124
SIGNAL	0454 0614 0934
SIGNATURE	0444 1054
SKYMASTER	0224 0234
SL MARX	0614
SPRUCER	0844
STANDARD COMPONENTS	1154
STAR SIGHT	1114
STAR SIGHT CABLE SERVICE	1134
STAR TRAK	0714
STARCOM	0054 0434 0454 0934 1044
STARGATE	0454 0554 0614 0934
STARQUEST	0454 0934
STS	0104
TANDY	1094
TELE	0074
TELE+1	0074
TELECOM ITALIA	0264 0274 0284 0294 0304 0314 0324 0334 0344 0354 0364 0374 0384 0394 0404 0414
TELESERVICE	0044 0114
TELEVIEW	0614
TEXSCAN	1154
TOCOM	0904 1214 1244
TOSHIBA	0424 1284
TUDI	0014
TUSA	0454 0934
TV86	1084
UNIKA	0994 1004 1144
UNITED ARTISTS	1234
UNITED CABLE	0054 1044
UNIVERSAL	0954 0994 1004 1144 1164
VIDEO TECH	0664
VIDEOWAY	1274
VIEWMASTER	0584
VIEWSTAR	0474 0984 1014 1084 1094
ZENITH	0044 0424 0544 0594 0634 0724 0734 0754 0874 1114 1284 1294 1304 1314 1324 1334 1344
ZENITEK	0514

DVD

3DLAB	0155
ACOUSTIC SOLUTIONS	0545
AEG	0505
AIWA	0545 0565
AKAI	0035 0435 0505
ALBA	0515 0525 0585
AMSTRAD	0585
ANSONIC	0355
APEX DIGITAL	0405
AWA	0375
A-TREND	0555
BLACK DIAMOND	0585
BLUE SKY	0405 0455 0525 0585
BOMAN	0395
BRANDT	0685
BUSH	0355 0425 0515 0525 0585 0635
CAMBRIDGE AUDIO	0495
CENTRUM	0585
cineULTRA	0525
CGV	0325 0415
CLASSIC	0545
CLATRONIC	0505
CONIA	0405
CROWN	0345 0685
CYBERCOM	0355
CYBER HOME	0265 0555
CYTRON	0365 0685
DAEWOO	0345 0365
DANSAL	0345 0395
DECCA	0345
DENON	0025
DENVER	0505 0525
DENZEL	0385
DIAMOND	0535 0685
digitRED	0515
Digitrex	0405
DIK	0355
DIVDo	0365
DMTECH	0395
DUAL	0385 0395 0545 0585 0685
ELTA	0425
EMERSON	0365
ENZER	0385
FERGUSON	0685
FINLUX	0345 0395 0575
GE	0515
GLOBAL SPHERE	0535
GOLDSTAR	0125 0575
GOODMANS	0395 0425 0435 0685
GO VIDEO	0395
GRAETZ	0385
GRUNDIG	0155 0365 0435 0455 0585 0685
GRUNKEL	0345
HANSEATIC	0575
HARMAN/KARDON	0205
HDT	0365
HITACHI	0095 0195 0225 0275 0385
HITEKER	0405
HYUNDAI	0395
ISP	0455

JAMO 0595 0605
 JMB 0455
 JOCEL 0615
 JVC 0705 0135 0145 0155 0485
 KARCHER 0395
 KENDO 0525
 KENWOOD 0025 0085
 KISS 0385
 LASONIC 0115
 LAWSON 0365
 LECSON 0625
 LENCO 0345 0355 0525 0685
 LENOXX 0425
 LEXIA 0525
 LG 0125 0575
 LIFETEC 0355 0685
 LIMIT 0535
 LINN 0245
 LOEWE 0155 0255
 LOGIC LAB 0535
 LOGIX 0365 0395
 LUMATRON 0365
 LUXMAN 0095
 MAGNAVOX 0705 0055 0445 0485
 MANHATTAN 0365
 MARANTZ 0155
 MATSUI 0455 0685
 MBO 0425
 MEDION 0355 0395 0685
 METZ 0185 0585 0665
 MICROMEDIA 0705 0155 0485
 MICROMEGA 0155
 MICROSOFT 0655
 MICROSTAR 0355
 MINAX 0585
 MITSUBISHI 0585 0695
 MONYKA 0385
 MUSTEK 0545
 Mx ONDA 0685
 NAD 0215 0575
 NAIKO 0345
 NEUFUNK 0385
 NORDMENDE 0355
 ONKYO 0705 0055 0105 0485
 OPTIMUS 0175 0185 0665
 ORION 0455
 ORITRON 0685
 PACIFIC 0305 0335 0355 0435 0535
 PALLADIUM 0455
 PALSONIC 0405 0635
 PANASONIC 0025
 PHILIPS 0705 0055 0155 0255 0485
 PHONOTREND 0525
 PIONEER 0175 0185 0665
 PROLINE 0615 0685
 PROSCAN 0655
 PROSONIC 0525
 PROVISION 0525
 RADIONETTE 0575
 RAITE 0385
 RCA 0655
 REC 0025 0635
 RED STAR 0345 0505

REOC 0535
 REVOY 0525
 ROADSTAR 0425 0525 0635
 ROTEL 0005 0015 0145
 SABA 0685
 SALORA 0575
 SANSUI 0455 0505
 SAMSUNG 0095 0225
 SCAN 0365
 SCHAUB LORENZ 0505
 SCHNEIDER 0365 0395 0435 0685
 SCIENTIFIC LABS 0535
 SCOTT 0405 0685
 SEG 0385 0535 0585
 SHARP 0645
 SHANGHAI 0405
 SHERWOOD 0575
 SHINCO 0515
 SHINSONIC 0075
 SILVA 0505
 SILVA SCHNEIDER 0355
 SINGER 0425
 SKYMASTER 0545
 SLIM ART 0345
 SM ELECTRONICS 0425 0535 0545
 SONY 0045 0095 0235 0285 0675
 SONY-PS2 0165
 SOUNDMASTER 0535
 SOUNDWAVE 0395
 STANDARD 0535 0685
 SUNWOOD 0505
 SYVA 0405
 TATUNG 0345
 TEAC 0185 0435 0515 0535 0575
 TECHNICS 0025
 TECHNIKA 0345
 TECHWOOD 0585
 TENSAT 0425 0685
 TEVION 0685
 THETA DIGITAL 0185
 THOMSON 0705 0135 0655
 TOKAI 0385 0505
 TOKIWA 0365
 TOSHIBA 0705 0055 0465 0475 0485
 UNITED 0505
 UNIVERSUM 0125 0575 0585
 VENTURER 0435
 VIETA 0365
 VOXSON 0355 0545
 WALKVISION 0515
 WESDER 0525
 WHARFEDALE 0615 0625
 XMS 0505 0635
 X-BOX 0295
 YAMAHA 0025 0065 0155
 YAMAKAWA 0385
 YUKAI 0545
 ZENITH 0705 0055 0125 0485 0575

CD

ADC 0346
 ADCOM 0286 0496
 AIWA 0586 0706 0716 0986 0996 1286
 AKAI 0226 0236 0246 0416 0636
 ARCAM 1066 1136
 AUDIO-TECHNICA 0316
 BSR 0356
 BURMESTER 1316
 BUSH 1126
 CALIFORNIA AUDIO LABS 0556 1236
 CAMBRIDGE AUDIO 1196
 CARRERA 0056 0356
 CARVER 0846 1136 1286 1296
 DENON 0436 0526 0546 0656 1096
 DKK 1226
 DUAL 0486
 EMERSON 0496 0756 1306
 FISHER 0096 0106 0646 1106 1116 1176 1206 1296
 GARRARD 1316
 GENEXXA 0026 0336 0356 0476 0736 0756 0806 0846 0856
 0986 1076 1246 1306
 GOLDSTAR 0056 0666 0676 0946
 GOODMANS 1126
 GRUNDIG 1076 1086 1096 1136 1146 1156 1166
 HARMAN/KARDON 0066 0616 0626 0636 1286
 HITACHI 0086 0186 0426 0486 0496 0696 0926 1246
 INNOVATION 0906 0866 0896
 JVC 0076 0086
 KENWOOD 0096 0146 0176 0196 0206 0216 0266 0424 0686
 0806 0996 1036 1256 1336
 KRELL 1136 1286
 LIFETEC 0896
 LIGHT CONTROL 0636
 LINN 1066 1136 1286
 LKI 1306
 LUXMAN 0286
 MAGNAVOX 0936 1066 1136 1286 1306
 MAGNUM 0296 0386
 MARANTZ 0046 0136 0166 0746 0796 0906 1066 1136 1236
 1286 1336
 MATSUI 1136
 MATSUSHITA 0576 0956
 MCS 0036 1236
 MEDION 0866 0896 0906 0976
 MEMOREX 0026 0496 0736 0746 0756
 MERIDIAN 1136
 MGA 0606
 MICROMAXX 0896
 MICROMEGA 1136
 MISSION 1066 1136 1286
 MITSUBISHI 0626 0706
 MTC 1316
 NAD 0256
 NAIM 1136
 NAKAMICHI 1186
 NEC 0036 0276 0286
 NIKKO 0316 0646
 NONAME 1126
 NSM 1286
 ONKYO 0366 0826 0856 0886 1016
 OPTIMUS 1226 1246 1256 1276 1296 1306 1316 1326 1346

PANASONIC 0536 0556 0966 0976 1236
 PARASOUND 1316
 PHILIPS 0936 1066 1136 1146 1216 1286 1336
 PIONEER 0026 0356 0516 1246 1306 1326 1346
 POLK AUDIO 1286
 PROTON 1066 1136 1286
 QED 1286
 QUAD 1136 1216
 QUASAR 0556 1236
 RADIOLA 0786 0916
 RADMOR 1146
 RCA 1246 1266 1296 1306 1326
 REALISTIC 0496 0736 0746 0756 1076 1296 1316
 ROTEL 1066 1136
 SABA 0486
 SAE 1066 1136 1286
 SANSUI 0446 0456 0466 0726 1066 1136 1286 1306
 SANYO 0126 0326 0396 1296
 SCHNEIDER 0786 0916 1126 1146
 SCOTT 0756 1306 1306
 SHARP 0506 0596 0746 0766 0776 0806 1256
 SHERWOOD 0746 0876
 SIEMENS 0566
 SIGNATURE 0636
 SONIC FRONTIERS 1286
 SONY 0346 1006 1016 1026 1036 1046 1056 1226
 SOUNDESIGN 1276
 SUPRITECH 1126 1196
 SYLVANIA 1066 1136
 TASCAM 1316
 TCM 0326 0896
 TEAC 0746 0806 0816 0836 1316
 TECHNICS 0556 0976 1236
 TELEFUNKEN 0486
 THETA DIGITAL 0936
 THOMSON 0486
 TOSHIBA 0256
 UNIVERSUM 1136
 VECTOR RESEARCH 0056 0346
 VICTOR 0076
 WARDS 1266 1286
 YAMAHA 0116 0156 0306 0316 0376 0766

AMP

ROTEL 0007



ROTEL

The Rotel Co. Ltd.

10-10 Shinsen-Cho
Shibuya-Ku
Tokyo 150-0045
Japan

Phone: +81 3-5458-5325

Fax: +81 3-5458-5310

Rotel of America

54 Concord Street
North Reading, MA 01864-2699
USA

Phone: +1 978-664-3820

Fax: +1 978-664-4109

Rotel Europe

Dale Road
Worthing, West Sussex BN11 2BH
England

Phone: + 44 (0)1903 221 761

Fax: +44 (0)1903 221525

Rotel Deutschland

Kleine Heide 12
D-33790 Halle/Westf.
Germany

Phone: +49 05201-87170

Fax: +49 05201-73370

www.rotel.com