

# RR-970 SYSTEM REMOTE CONTROL

**RR-970** is the system remote control from Rotel. This remote will operate all current 900 Series Rotel remote controllable components. To use the RR-970 it is necessary to set the Program Codes for your individual Rotel components. The following list will show the code settings for Initial Set Up of the RR-970. Please set the RR-970 for your system needs. These codes set the commands for each section of the controls on the various Rotel components.

## A. Amplifier or preamplifier model number and code setting

A1: RTC-940AX, RTC-950AX, RX-950AX.

A2: RA-985BX, RA-945, RC-995, RTC-970.

A4: RC-990BX.

## B. Tuner model number

B1: RTC-940AX, RTC-950AX, RX-950AX, RT-940AX.

B4: RT-990BX.

## C. CD Players

C1: RCD-970BX, RCD-975, RCD-945AX /955AX /965BX.

C2: RCD-940BX, RCC-940AX.

C3: RCD-930AX.

## D. Cassette decks

D1: RD-960BX.

## The RR-970 is initially preset to operate the following items:

Amplifier (A2) RA-985BX, RA-945, RC-995, RTC-970.

Tuner (B1) RTC-940AX, RX-950AX, RT-940AX.

CD player (C1) RCD-970BX, RCD-975.

Cassette deck (D1) RD-960BX.

To set the RR-970 for operation with other components will require the new components code to be entered into the [RR-970]. This is easily done. To select Remote Codes for:

**STANDBY(AMP),** used to set codes for amplifiers.

**TUNER,** used to set codes for tuners.

**CD,** used to set codes for CD players.

**TAPE 1,** used to set codes for cassette decks.

**SIMULTANEOUSLY** press the letter and number listed with your Rotel model to set the command codes for your Rotel component. For example: To set the C2 to operate the RCD-940BX, **press** CD and Number 2 at the same time. This will set the RR-970 to control the RCD-940BX.

The numbered buttons 0-9 on RR-970 are **Direct Access Keys** for the **Tuner or CD** players. *Press Tuner* and then choose preset stations. *Press CD* and choose track numbers for a CD. To access a number *higher than 10* requires the following steps for **RCD-930AX, RT-940AX, and RT-990BX** (C3, B1, and B4): Press the +10 button and then press the button that equals the remainder of the track number you want. Example: Press +10 and then 3 = 13.

For **RCD-970BX, RCD-975, and RCD-940BX** (C1, C2) Press 1 and then 3 = 13. (Not +10.)

For the Tuner section of **RX-950AX, RTC-950AX and RTC-940AX** (B1), the +10 button does not work. To access higher than 8, press 9 (**Button 9 = +8**) and then the remainder of the number you want. Example: Button 9 + 5 = 13. Button 9 + 1 = 9.

