


Software Upgrade

This information is intended for qualified personnel only. The software upgrade procedure for the RCD-1520, RCD-1570, RCD-12 and RCX-1500 requires creating a software upgrade CDR with the upgrade file provided by Rotel.

Upgrade CDR Creation

A. Create CDR Using a CD Write Program (Roxio, Nero, etc)


1. Copy the provided data file "MTK.BIN" to a blank CDR data disc using the preferred CD writing program. The file name *must* be all capital letters, including the .BIN extension. This should be the only file on the CD. The CD name (disc volume) should be renamed to "MEDIATEK" before writing the disc.

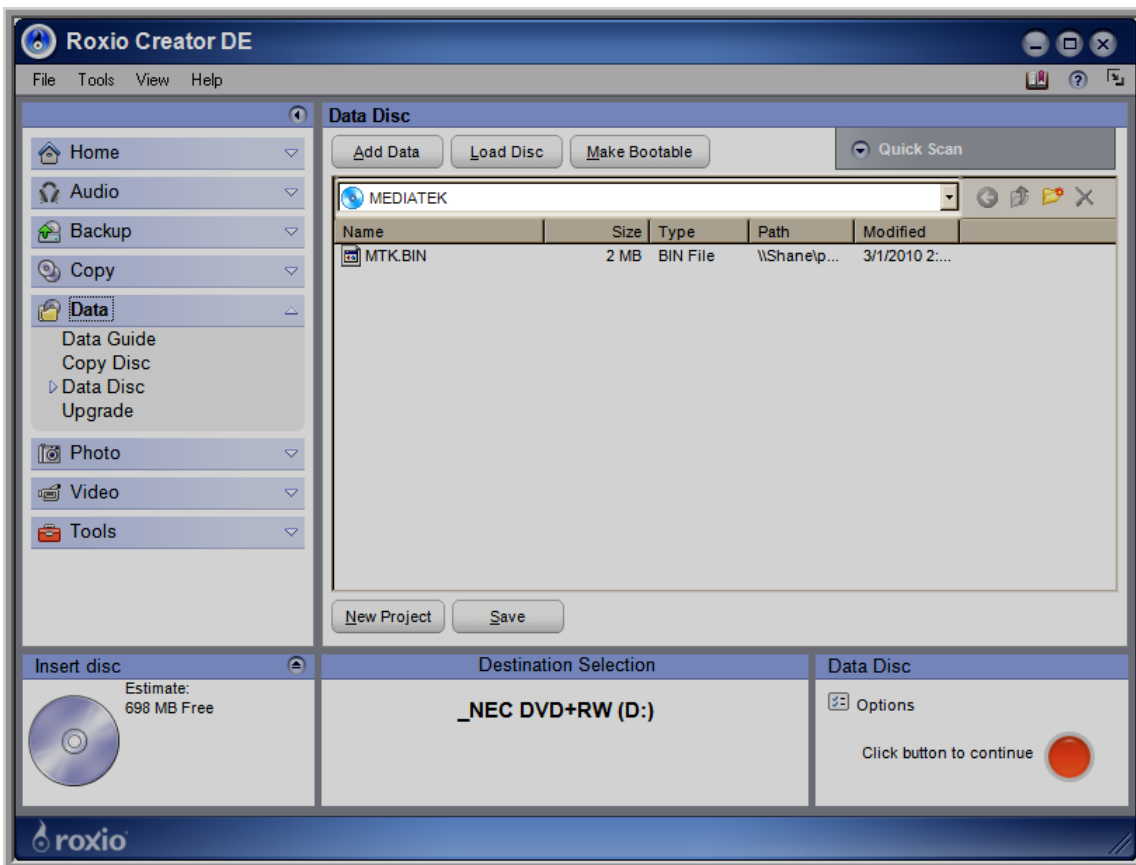


2. Once the CDR has been successfully created, refer to the upgrade procedure below.

B. Create CDR Using Windows XP

1. Insert a blank CDR disc into the CDR drive.
2. Open the folder where the provided file "MTK.BIN" has been saved.
3. Right click on the file "MTK.BIN", highlight "Send To" and select the system CDR/DVDR Drive. The exact description may vary by system, but usually will look similar to "DVD/CD-RW Drive (D:)".

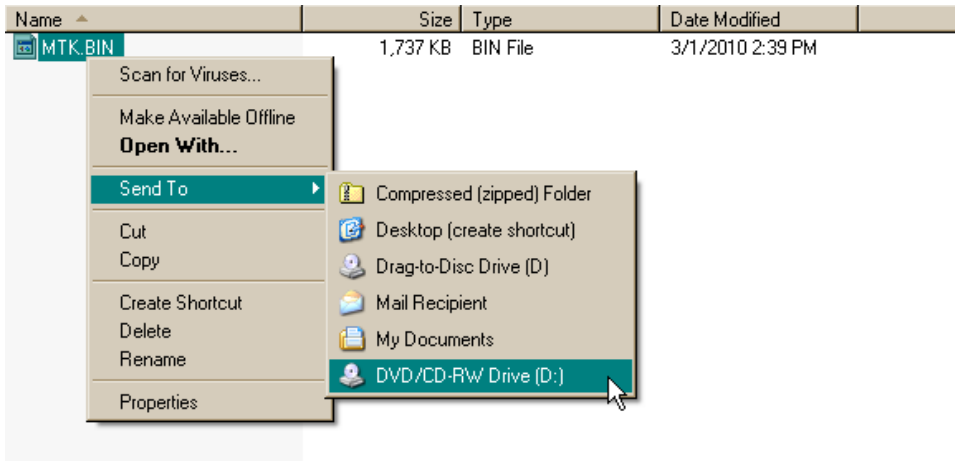

4. A message should pop up on the bottom of the screen prompting "You have files waiting to be written to the CD". Click the small CD icon in the system tray to view the files.
5. From the CDR drive screen, click on "Write these files to CD" to start the CD Writing Wizard.

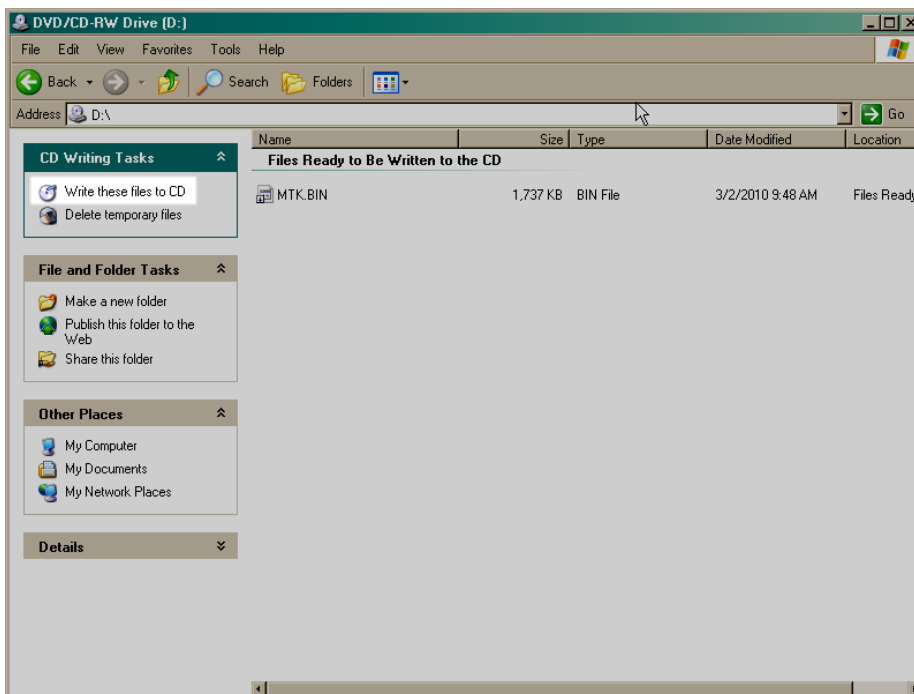

6. From the CD Writing Wizard screen, change the CD Name to "MEDIATEK", then click next to proceed.



7. Once the CDR has been successfully created, refer to the upgrade procedure below.

Upgrade Procedure

1. Power the Rotel CD player on.
2. Insert the upgrade CDR disc into the unit. The front panel display should read "DO YOU UPGRADE" once the disc is loaded.
3. Press the "PLAY" button on the front panel. The display will change to "UPGRADING" while the software is being upgraded.
4. Shortly after pressing PLAY the unit will eject the CD. Remove the CD from the slot but DO NOT power down the unit yet. The unit will continue to update for several minutes after the disc has been ejected.
5. When the upgrade has been completed, the display will change to "WELCOME ROTEL CD", followed by "No Disc". There will be an audible noise as the drive motor of the unit spins when this occurs.
6. Power off the unit via the front panel power switch. Power it back on to return the unit to normal operation and complete the upgrade process.