

Front USB Software Upgrade Instructions

The RSP-1572 and RSX-1562 have six separate software modules – main software, video software, scaler software, front USB software, standby software and DSP audio software. The instructions below detail the procedure to update the video software.

The procedure to update the USB software is accomplished with the use of a portable USB drive that is loaded with the update software file.

This software is only for the RSP-1572 and RSX-1562. Rotel does not take any responsibility for loss of information or problems resulting from a failed download. Units that fail after a download may be returned to Rotel for attention under warranty.

Items needed for upgrade:

- Computer with a USB connection.
- Portable USB drive.
- Upgrade software file downloaded from Rotel.
- HDMI monitor connected to the RSP-1572 or RSX-1562
- RR-CX94 remote control (or any remote that will control the Rotel unit).

Upgrade Procedure

1. Make note of the currently installed USB software by pressing & holding the MUTE button on the remote or front panel for 5 seconds. The unit should display the current software versions on the On Screen Display output to the monitor.
2. Browse to the location on the computer where the USB upgrade file was saved.
3. The file must be renamed from its original name to "rotel.rom". On a Windows PC, right click the file and choose "rename" to accomplish this.
4. Connect the portable USB drive to the computer, and copy the renamed "rotel.rom" file to the USB drive. Note that the file should be copied to the main (or "root") folder of the drive, and not into a sub folder in the drive.

5. Switch the Rotel unit to the USB input via the front panel or remote button, and connect the USB drive to the front USB input. The On Screen Display of the unit should display:

iPod/USB UPGRADE

ARE YOU SURE?

YES

NO

6. Make sure "YES" is highlighted, and then press the "SEL" button on the remote to begin the upgrade process. The display should now show:

iPod/USB UPGRADE

Upgrading...

0m 30sec

7. The update process should take less than 1 minute. When the upgrade is complete, the unit will simply switch back to the USB input. The USB drive can now be removed from the unit and the update is complete.